


# BODYFLEX®

## PRO T4000 TREADMILL

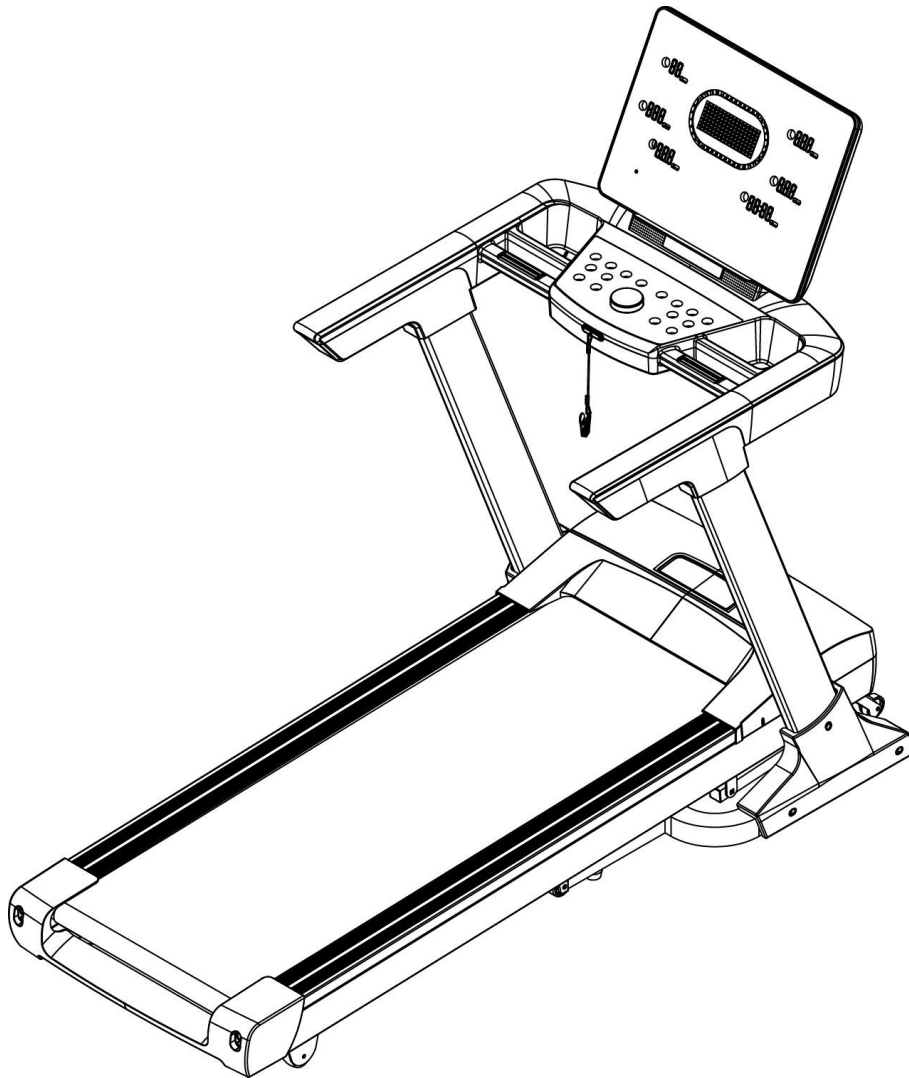

Art.N: BF-T4000

Illustrations are indicative. Minor construction or visual differences may be present and do not affect safe assembly and operation.

## Contents

| No. | Section                                   |
|-----|-------------------------------------------|
| 1   | Safety instructions                       |
| 2   | Package contents and tools                |
| 3   | Assembly                                  |
| 4   | Moving, folding and unfolding             |
| 5   | Technical information                     |
| 6   | Grounding and electrical safety           |
| 7   | Console and controls                      |
| 8   | Operating modes and programs              |
| 9   | FitShow app connection                    |
| 10  | Cleaning, lubrication and belt adjustment |
| 11  | Error codes                               |
| 12  | Exploded diagram                          |
| 13  | Service parts list                        |
| 14  | Disposal and recycling                    |
| 15  | Importer and distributor details          |

### IMPORTANT

Read this manual completely before assembly and use. Keep it for future reference and pass it on to every subsequent user of the machine. Keep the proof of purchase, guarantee document, this manual and the original carton during the entire ownership period.

## 1. Safety instructions

### HEALTH WARNING

Before using the treadmill, consult a doctor or other qualified medical specialist if you have a medical condition, cardiovascular problems, high or low blood pressure, diabetes, joint or spinal issues, are taking medication, are recovering from injury or surgery, are pregnant, or have not exercised for a long time. If you experience chest pain, dizziness, faintness, shortness of breath, unusual palpitations or any unusual pain, stop immediately and seek medical attention. Use of the machine is at the user's own responsibility. The manufacturer, importer and distributor are not liable for injuries or damage caused by non-compliance with this manual, improper assembly, use despite medical contraindications, unauthorized modifications or unauthorized repairs.

- Place the unit on a clean, dry, level and firm surface. Do not use it outdoors, in damp areas or near water.
- Leave a clear area behind the treadmill and keep children and pets away from the machine during assembly and use.
- Check that the running belt is centered, that no visible damage is present, and that all accessible fasteners are tightened before each use.
- Attach the safety key clip to your clothing. The treadmill must not be started without the safety key correctly fitted.
- Wear suitable athletic shoes with clean soles. Do not use the unit barefoot, in socks, in high heels, or with loose and hanging clothing.
- Do not start the machine while standing on the running belt. Stand on the side rails, start at low speed, and only then step onto the belt.
- Do not insert objects into the openings and do not allow towels, cables or clothing to get into moving parts.

- If the treadmill accelerates unexpectedly or behaves abnormally, pull out the safety key, step off the belt and switch off the power.
- Connect the machine directly to a suitable grounded outlet. Do not use a damaged outlet, adapter, multi-socket extension or extension cord.
- Before cleaning, lubricating, adjusting or moving the treadmill, switch off the main power switch and unplug the unit.
- Do not remove the motor cover. Internal inspections and repairs must be carried out only by qualified service personnel.

## 2. Package contents and tools

Open the package carefully and verify that all essential parts and tools are present before assembly.

| No. | Description                   | Spec.          | Qty. | No. | Description                                                   | Spec.    | Qty. |
|-----|-------------------------------|----------------|------|-----|---------------------------------------------------------------|----------|------|
| 1   | Main frame assembly           |                | 1    | 82  | Internal serrated lock washer                                 | 10       | 4    |
| 12  | Combination wrench            | S=13\ 14\ 15mm | 1    | 8   | Panel assembly                                                |          | 1    |
| 13  | Hex key                       | 5mm            | 1    | 67  | Hex socket flat round head screw                              | M8*16    | 8    |
| 14  | Hex key                       | 6mm            | 1    | 75  | Cross recessed pan head self-tapping and self-drilling screws | ST4.2*19 | 6    |
| 5   | Console assembly              |                | 1    | 68  | Hex socket flat round head screw                              | M10*70   | 4    |
| 32  | Left lower cover              |                | 1    | 66  | Hexagon socket head screws                                    | M8*12    | 4    |
| 31  | Right lower cover             |                | 1    | 53  | Power cord                                                    |          | 1    |
| 103 | MP3                           | To order       | 1    | 46  | Oil bottle                                                    |          | 1    |
| 49  | Safety key                    |                | 1    | 99  | Lower cover of left armrest                                   |          | 1    |
| 86  | Internal serrated lock washer | 8              | 8    | 100 | Right armrest lower cover                                     |          | 1    |

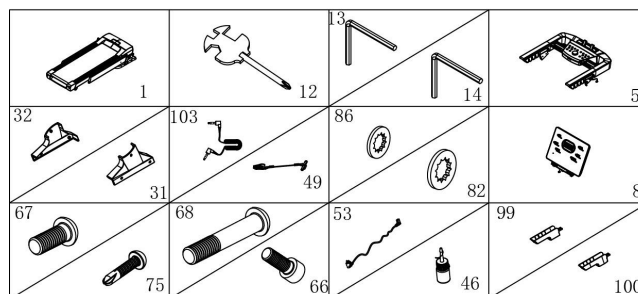


Fig. 1. Main parts and accessories in the package

**Do not connect the power cord until assembly is fully completed.**

### 3. Assembly

#### BEFORE ASSEMBLY

Because of the weight and size of the machine, assembly is recommended to be carried out by two adults. Do not pinch cables between metal parts and do not fully tighten the screws until all holes are aligned.

#### Step 1 – Uprights and base

- Raise the left and right uprights carefully as shown in the illustration.
- Secure them to the base using the specified screws and washers. Tighten the screws lightly at first.

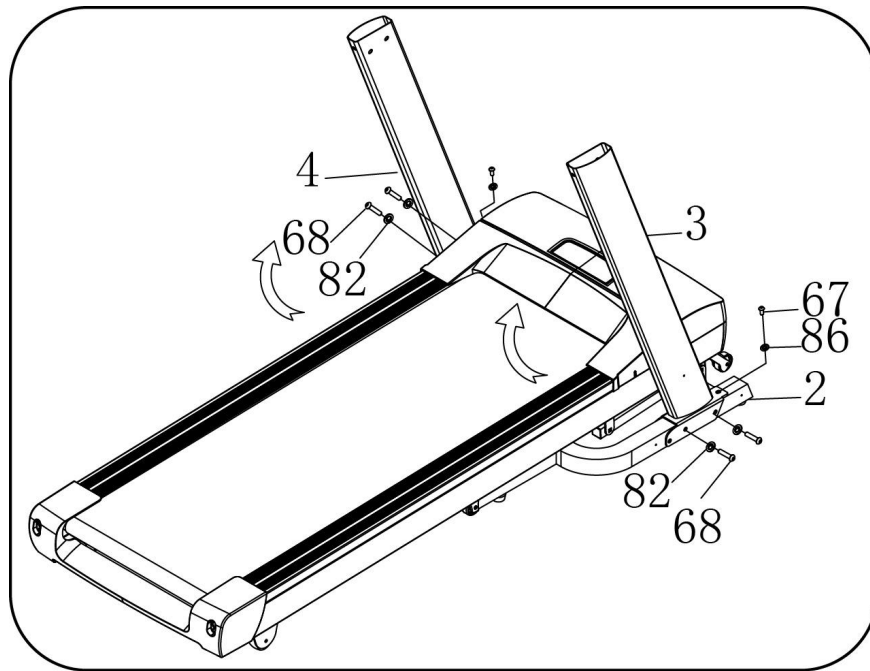


Fig. 2. Fixing the uprights to the base

## Step 2 – Console connection

- Position the console assembly above the uprights.
- Connect the relevant cables without twisting or pinching them.
- Fix the console with the specified screws and washers, then align and tighten evenly.

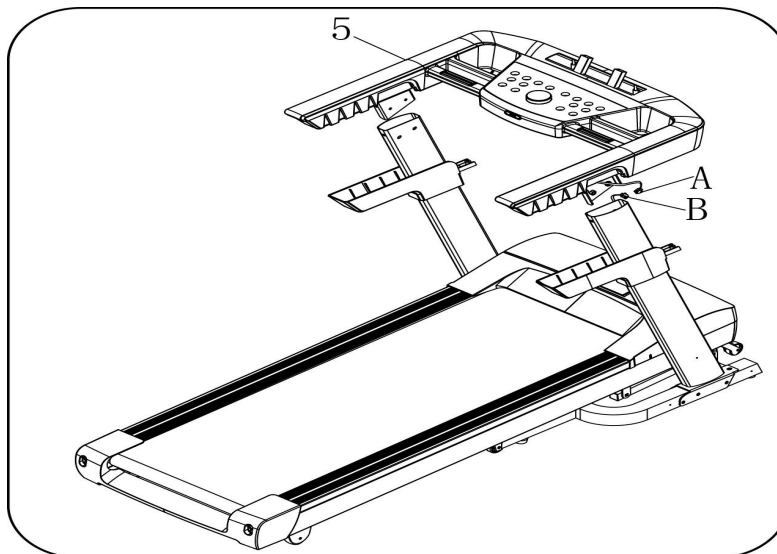


Fig. 3. Installing the console assembly

## Step 3 – Covers and final check

- Install the protective covers and decorative parts.
- Insert the safety key into the marked position on the console.
- Connect the power cord to the treadmill only after a final check of the structure and fasteners.
- 

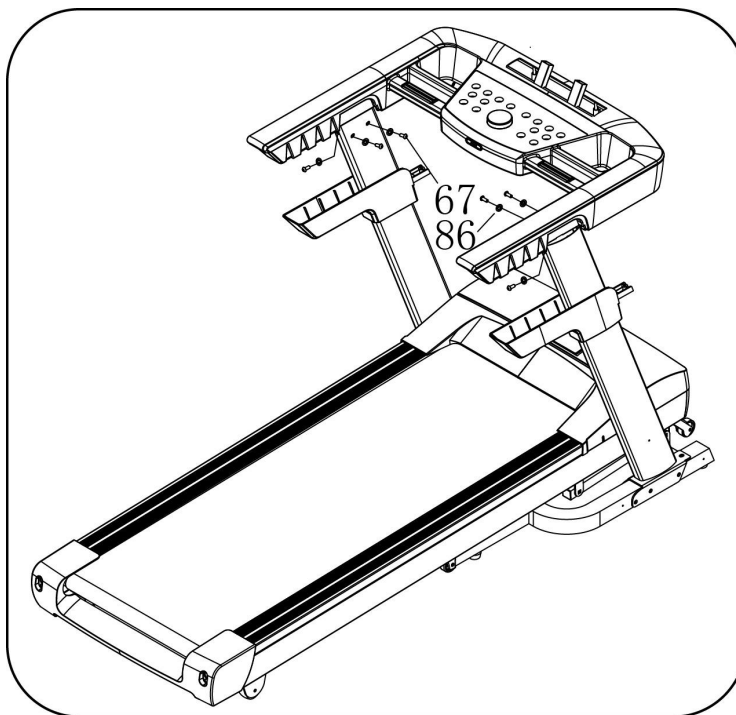


Fig. 4. Installing covers and finishing the assembly

## 4. Moving, folding and unfolding

- Switch off the unit, unplug it and secure the cable before moving it.
- Lift the rear part of the frame until the transport wheels touch the floor and move the treadmill slowly on a level hard surface.
- Do not pull or lift the machine by the console or display.

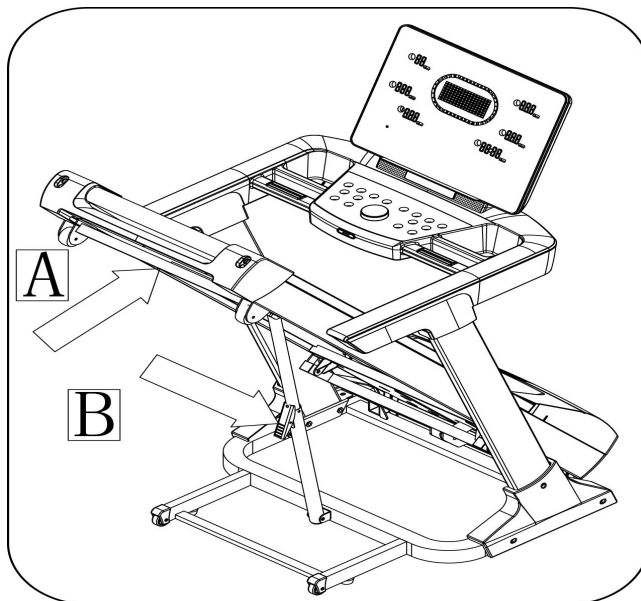


Fig. 5. Folding position

- For unfolding, clear the area behind and below the machine.
- Support the running deck with one hand, release the locking mechanism, and guide the platform downward.
- Do not let the deck fall freely.

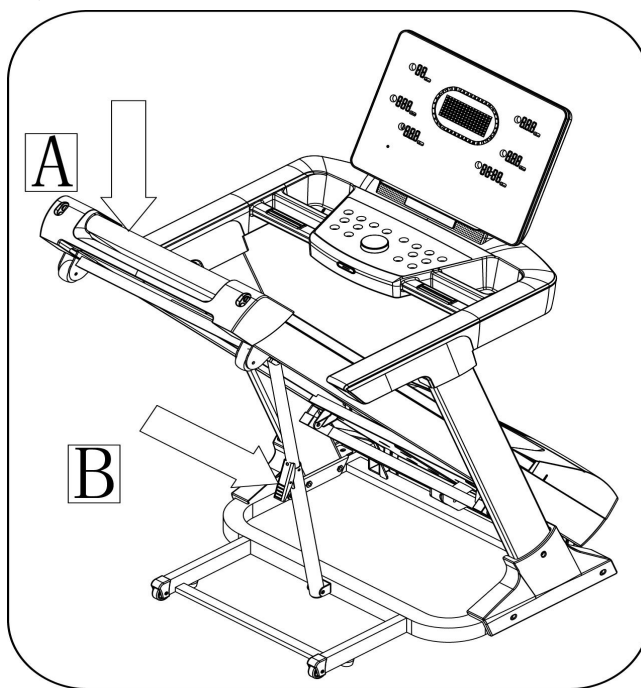


Fig. 6. Unfolding the running deck

## 5. Technical information

|                  |                                       |
|------------------|---------------------------------------|
| Power supply     | As indicated on the factory nameplate |
| Speed range      | 1.0–20.0 km/h                         |
| Incline range    | 0–20%                                 |
| Time display     | 0:00–99:59                            |
| Distance display | 0.00–99.9 km                          |
| Calories display | 0–999 kcal                            |

## 6. Grounding and electrical safety

- The treadmill must be grounded. In the event of a malfunction, grounding reduces the risk of electric shock.
- Use only an outlet installed and grounded according to applicable electrical regulations.
- Do not modify the factory-fitted plug. If it does not match the outlet, contact a qualified electrician.
- Do not use an adapter that removes or bypasses the protective earth conductor.

## 7. Console and controls

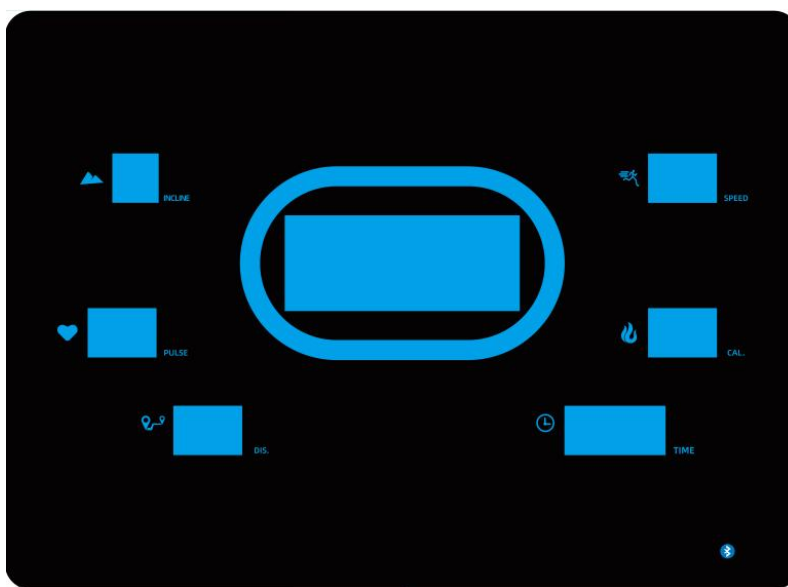


Fig. 7. Console overview

Typical buttons and display fields include START, STOP, MODE, PROG, SPEED +/–, INCLINE +/– and the main display windows for speed, time, distance, calories and incline.

- The pulse measurement function, if used through the hand sensors, is indicative only and not a medical measurement.
- For more stable readings, hold both sensors with clean, dry hands without squeezing excessively.

## 8. Operating modes and programs

- Quick start: after the safety key is inserted and the power is on, press START. The treadmill begins after a 3-second countdown at the lowest speed or the default speed of the selected program.

- Countdown modes: press MODE to select target by time, distance or calories. Set the target value and press START.
- Preset programs: the machine provides built-in programs P01–P20. Each program is divided into 16 segments and automatically adjusts speed and incline.
- User programs: U1, U2 and U3 allow custom training. Factory default starting values are U1 = 1 km/h, incline 0; U2 = 2 km/h, incline 0; U3 = 3 km/h, incline 0.
- Body fat / FAT function: this function is approximate and should not be used for medical evaluation or diagnosis.
- During operation, you may adjust speed and incline with the relevant keys. For normal stopping, use STOP. The safety key is for emergency stopping only.

## 9. FitShow app connection



Fig. 8. FitShow app QR code

- Scan the QR code to download the FitShow app, then register and log in.
- Turn on Bluetooth on your mobile phone and open the FitShow app.
- Select “Indoor Sports”, then use Bluetooth to scan for the nearby treadmill and choose “Device Connection”.
- After connection, choose the training mode and start. Tap “Stop” to finish the session.
- Bluetooth control does not replace the safety key. Follow the current on-screen instructions because app menus may change after updates.



## 10. Cleaning, lubrication and belt adjustment

### WARNING

Always unplug the treadmill before cleaning, lubricating or making any adjustment.

- Wipe the console, handrails and frame with a soft slightly damp cloth after use.
- Clean dust from both sides of the running belt and from the floor under the machine.
- After approximately 1.5 hours of continuous operation, switch off the treadmill and let it rest for about 10 minutes.

### Lubrication schedule

- Light use (less than 3 hours per week): lubricate once per year.
- Medium use (3–5 hours per week): lubricate once every 6 months.
- Heavy use (more than 5 hours per week): lubricate once every 3 months.
- Use treadmill silicone lubricant applied between the running belt and the deck.

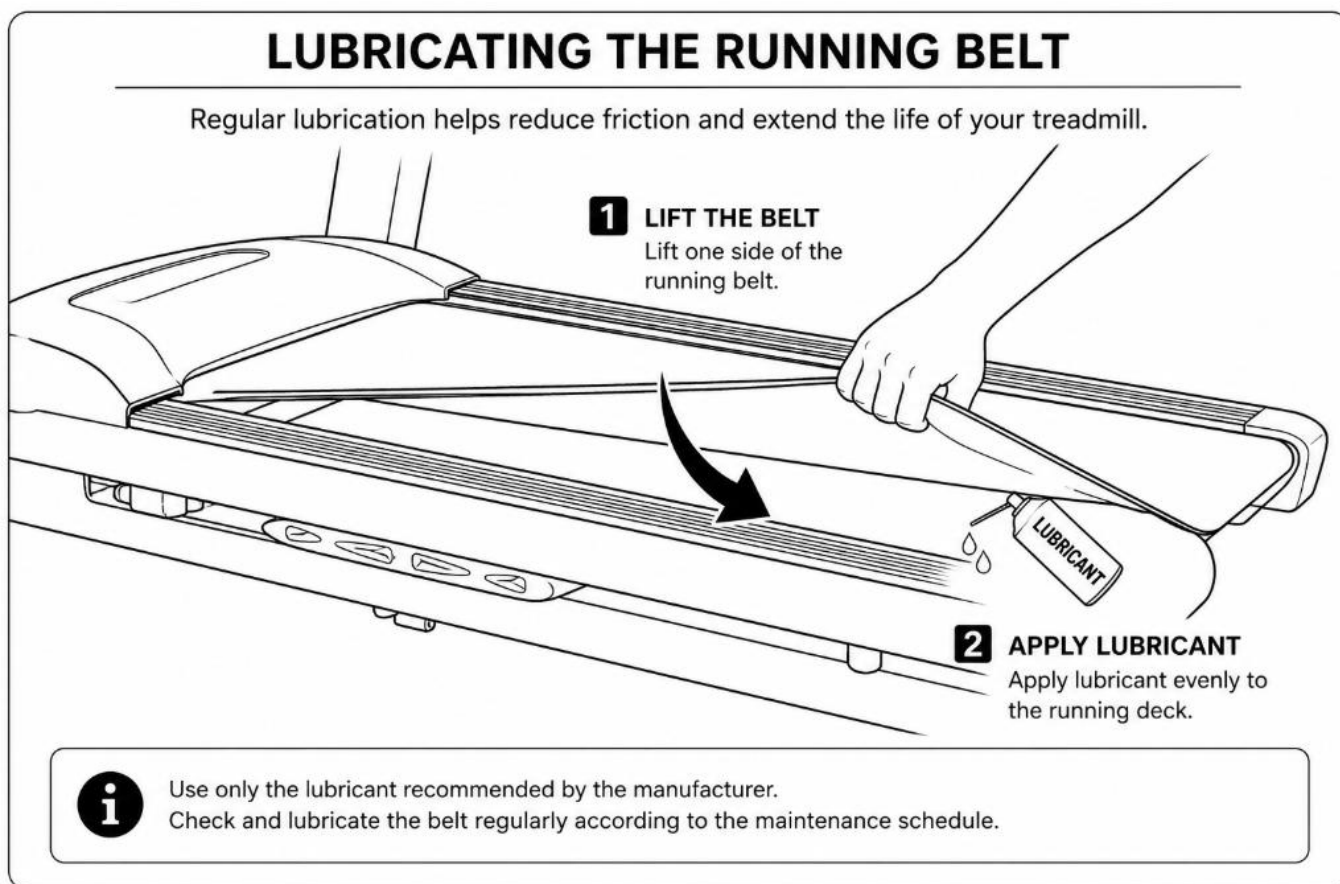


Fig. 9. Applying lubricant between the belt and the deck

## Belt tension and centering

- If the running belt is too loose, it may slip. If it is too tight, motor performance may decrease and wear may accelerate.
- Make only small adjustments and check the result after each correction.
- When the belt moves to one side, use the rear adjustment bolts according to the diagram.

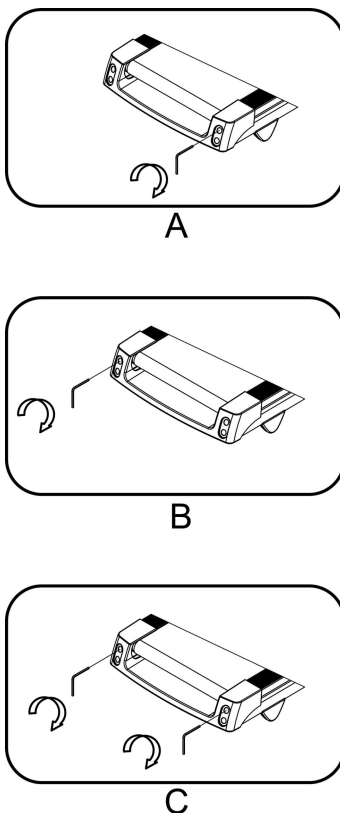


Fig. 10. Rear roller adjustment: A / B centering, C tension

**Any internal repair or electrical intervention must be performed only by qualified service personnel.**

## 11. Error codes

| Code | Meaning                                           | Action                                                                                                                           |
|------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| E01  | Poor communication between console and controller | Switch off the treadmill, check the communication cable and connectors, then restart. If the error repeats, service is required. |
| E02  | Impact / protection error                         | Check the power supply voltage, controller condition and motor wiring. Restart after correction.                                 |
| E03  | No speed sensing signal                           | Check whether the speed sensor is connected, damaged or incorrectly positioned.                                                  |
| E05  | Overcurrent protection                            | Check for abnormal belt resistance, heavy mechanical load, motor smell or controller overheating. Restart only after inspection. |
| E06  | Controller self-test error                        | Switch off and restart. If the error persists, controller inspection is required.                                                |
| E07  | Parameter missing                                 | Controller replacement or service setup may be required.                                                                         |
| E08  | EEPROM corrupt                                    | Controller replacement or service setup may be required.                                                                         |

## 12. Exploded diagram

The exploded diagram is intended for part identification only and not for self-disassembly of the treadmill.

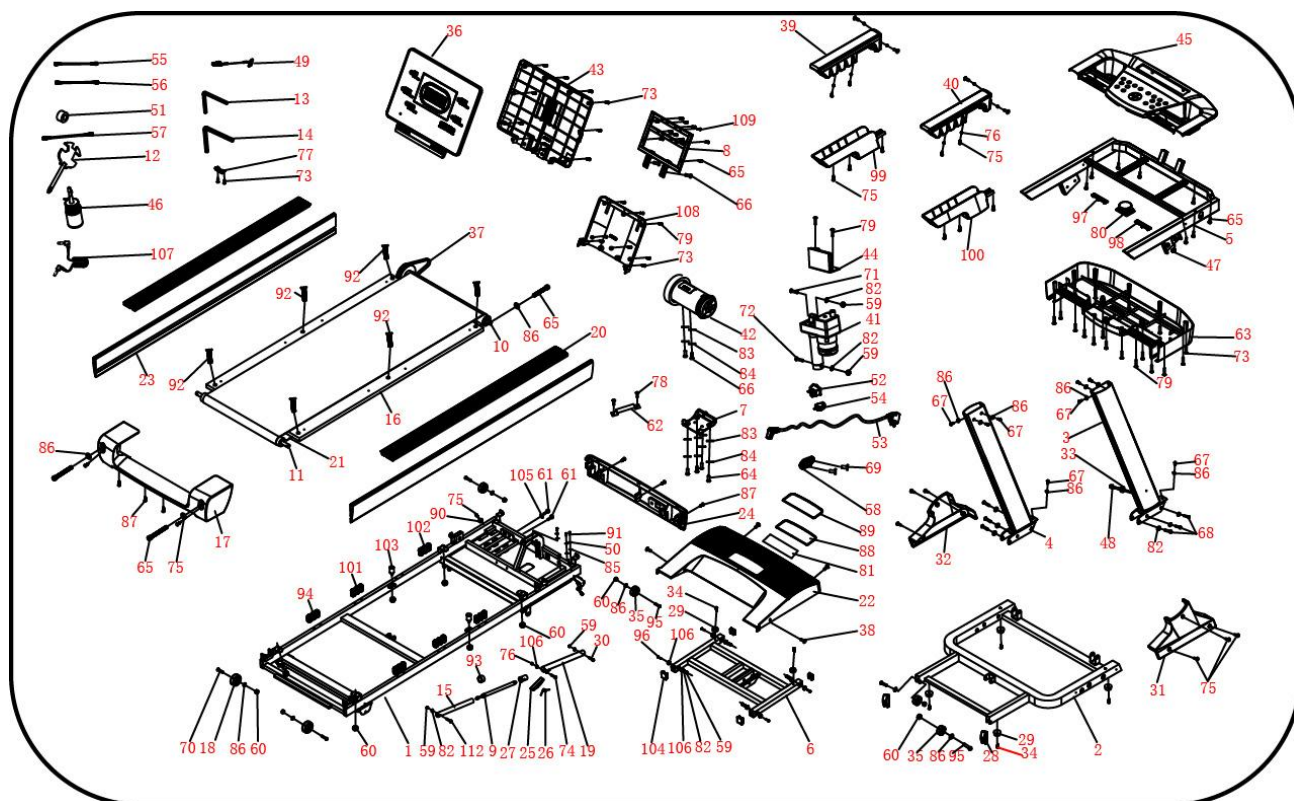


Fig. 11. Exploded diagram of Treadmill Bodyflex PRO T4000

## 13. Service parts list

The following list keeps the original factory terminology for easier spare-parts ordering.

| Serial number | Name                      | Specif.        | Quantity | Serial number | Name                                        | Specif. | Quantity |
|---------------|---------------------------|----------------|----------|---------------|---------------------------------------------|---------|----------|
| 1             | Main frame assembly       |                | 1        | 46            | Oil bottle                                  |         | 1        |
| 2             | Base frame assembly       |                | 1        | 47            | Upper segment line of electronic watch      |         | 1        |
| 3             | Right column group        |                | 1        | 48            | Lower segment line of electronic watch      |         | 1        |
| 4             | Left column group         |                | 1        | 49            | Safety lock                                 |         | 1        |
| 5             | Electronic watch assembly |                | 1        | 50            | Standard spring washer                      | 5       | 2        |
| 6             | Lifting frame assembly    |                | 1        | 51            | Magnetic ring                               |         | 1        |
| 7             | Motor seat assembly       |                | 1        | 52            | Power switch                                |         | 1        |
| 8             | Panel assembly            |                | 1        | 53            | Standard power cord                         |         | 1        |
| 9             | Pneumatic rod             |                | 1        | 54            | Overload protector                          |         | 1        |
| 10            | Front drum                |                | 1        | 55            | AC single branch                            |         | 1        |
| 11            | Rear drum                 |                | 1        | 56            | Blue single branch                          |         | 1        |
| 12            | With cross wrench         | S = 13, 14, 15 | 1        | 57            | Brown single branch                         |         | 1        |
| 13            | 5 # hexagon wrench        | 5mm            | 1        | 58            | Power cord socket                           |         | 1        |
| 14            | 6 # hexagon wrench        | 6mm equal      | 1        | 59            | Type I non-metallic insert hexagon lock nut | M10     | 8        |

|    |                                                                             |        |   |    |                                                                             |                           |    |
|----|-----------------------------------------------------------------------------|--------|---|----|-----------------------------------------------------------------------------|---------------------------|----|
|    |                                                                             | length |   |    |                                                                             |                           |    |
| 15 | Adjusting rod assembly                                                      |        | 1 | 60 | Type I non-metallic insert hexagon lock nut                                 | M8                        | 12 |
| 16 | Running board                                                               |        | 1 | 61 | Hexagon head screws Class C                                                 | M8*35                     | 2  |
| 17 | Rear angle guard                                                            |        | 1 | 62 | Backlight plate tableting                                                   |                           | 1  |
| 18 | Transparent adjusting roller                                                |        | 2 | 63 | Lower cover of electronic watch                                             |                           | 1  |
| 19 | Adjusting lever                                                             |        | 1 | 64 | Hexagon socket pan head screw                                               | M8*32                     | 4  |
| 20 | Side strip                                                                  |        | 2 | 65 | Cross recessed pan head tapping screws with pad                             | 4.2*15                    | 12 |
| 21 | Running belt                                                                |        | 1 | 66 | Hexagon socket head screws                                                  | M8*12                     | 6  |
| 22 | Motor cover                                                                 |        | 1 | 67 | Hexagon socket flat round head screw                                        | M8*16                     | 8  |
| 23 | Side strip                                                                  |        | 2 | 68 | Hexagon socket flat round head screw                                        | M10*70                    | 6  |
| 24 | Motor front cover                                                           |        | 1 | 69 | Cross recessed pan head screws                                              | M4*20                     | 2  |
| 25 | Safety pedal assembly                                                       |        | 1 | 70 | Hexagon socket flat round head screw                                        | M8*50                     | 2  |
| 26 | Torsion spring                                                              |        | 1 | 71 | Hexagon socket flat round head screw                                        | M10*45                    | 1  |
| 27 | Intertubular bushing                                                        |        | 1 | 72 | Hexagon socket flat round head screw                                        | M10*60                    | 1  |
| 28 | Roller shield                                                               |        | 2 | 73 | Cross recessed pan head tapping screws                                      | 4.2*13 (scraping pin end) | 33 |
| 29 | Foot pad                                                                    |        | 6 | 74 | Cross recessed pan head screws                                              | M6*40                     | 1  |
| 30 | Hexagon socket flat round head screw                                        | M10*50 | 1 | 75 | Cross recessed pan head self-tapping and self-drilling screws               | ST4.2*19                  | 15 |
| 31 | Right base shield                                                           |        | 1 | 76 | Type I non-metallic insert hexagon lock nut                                 | M6                        | 1  |
| 32 | Left base shield                                                            |        | 1 | 77 | Safety lock base                                                            |                           | 1  |
| 33 | Annular thread guard plug                                                   |        | 2 | 78 | Cross recessed pan head tapping screws                                      | ST2.9*6.5                 | 2  |
| 34 | Cross recessed pan head self-tapping and self-drilling screws               | 4.2*25 | 6 | 79 | Cross recessed pan head self-tapping and self-drilling screws               | ST4.2*12                  | 13 |
| 35 | Carrying wheel                                                              |        | 2 | 80 | Flying shuttle                                                              |                           | 1  |
| 36 | Panel upper cover                                                           |        | 1 | 81 | Backlight plate                                                             | To order                  | 1  |
| 37 | Multi-wedge belt                                                            |        | 1 | 82 | Internal serrated lock washer                                               | 10                        | 14 |
| 38 | Self-tapping and self-drilling screws with cross recessed disc head and pad | 4.8*19 | 4 | 83 | Plain washer class C                                                        | 8                         | 6  |
| 39 | Left foam armrest                                                           |        | 1 | 84 | Standard spring washer                                                      | 8                         | 6  |
| 40 | Right foam armrest                                                          |        | 1 | 85 | Internal serrated lock washer                                               | 5                         | 2  |
| 41 | Lifting motor                                                               |        | 1 | 86 | Internal serrated lock washer                                               | 8                         | 19 |
| 42 | DC motor                                                                    |        | 1 | 87 | Self-tapping and self-drilling screws with cross recessed disc head and pad | ST4.2*19                  | 6  |
| 43 | Lower panel cover                                                           |        | 1 | 88 | Acrylic plate                                                               | To order                  | 1  |
| 44 | Control circuit board                                                       |        | 1 | 89 | Chrome-plated frame                                                         | To order                  | 1  |
| 45 | Upper cover of electronic watch                                             |        | 1 | 90 | Side strip buckle                                                           |                           | 2  |

| Serial number | Name                                  | Specification | Quantity | Serial number | Name | Specification | Quantity |
|---------------|---------------------------------------|---------------|----------|---------------|------|---------------|----------|
| 91            | Cross recessed pan head screws        | M5*8          | 2        | 113           |      |               |          |
| 92            | Hexagon socket countersunk head screw | M8*32         | 6        | 114           |      |               |          |
| 93            | Adjusting rod spacer sleeve           |               | 1        | 115           |      |               |          |
| 94            | Buffer pad                            | Yellow        | 2        | 116           |      |               |          |
| 95            | Hexagon socket flat round head screw  | M8*40         | 4        | 117           |      |               |          |
| 96            | Square neck screws with round head    | M10*55        | 4        | 118           |      |               |          |
| 97            | Left pulse iron plate                 |               | 2        | 119           |      |               |          |
| 98            | Right pulse iron sheet                |               | 2        | 120           |      |               |          |
| 99            | Lower cover of left armrest           |               | 1        | 121           |      |               |          |
| 100           | Right armrest lower cover             |               | 1        | 122           |      |               |          |
| 101           | Buffer pad                            | Blue          | 2        | 123           |      |               |          |
| 102           | Buffer pad                            | Red           | 2        | 124           |      |               |          |
| 103           | Buffer pad                            | φ 25*30*M8    | 2        | 125           |      |               |          |
| 104           | Plug in square pipe                   |               | 4        | 126           |      |               |          |
| 105           | Plain washer class C                  | 8*24          | 1        | 127           |      |               |          |
| 106           | Casing                                |               | 8        | 128           |      |               |          |
| 107           | MP3 line                              |               | 1        | 129           |      |               |          |
| 108           | Panel rear cover plate                |               | 1        |               |      |               |          |
| 109           | Cross recessed pan head screws        | M6*20         | 6        |               |      |               |          |
| 110           |                                       |               |          |               |      |               |          |
| 111           |                                       |               |          |               |      |               |          |
| 112           |                                       |               |          |               |      |               |          |

## 14. Disposal and recycling


### DO NOT DISPOSE WITH HOUSEHOLD WASTE

This product is electrical and electronic equipment. At the end of its service life, do not dispose of it with unsorted household waste. Hand it over to an authorized collection point for waste electrical and electronic equipment. Do not dispose of the console and display, controller and electronic boards, motor, sensors, cables, power cord, switch and other electrical components in the general waste bin. Batteries, if present, must be collected separately. Separate the cardboard, metal and plastic parts and recycle them according to local regulations.

# BODYFLEX®

## PRO T4000

Бягаща пътека

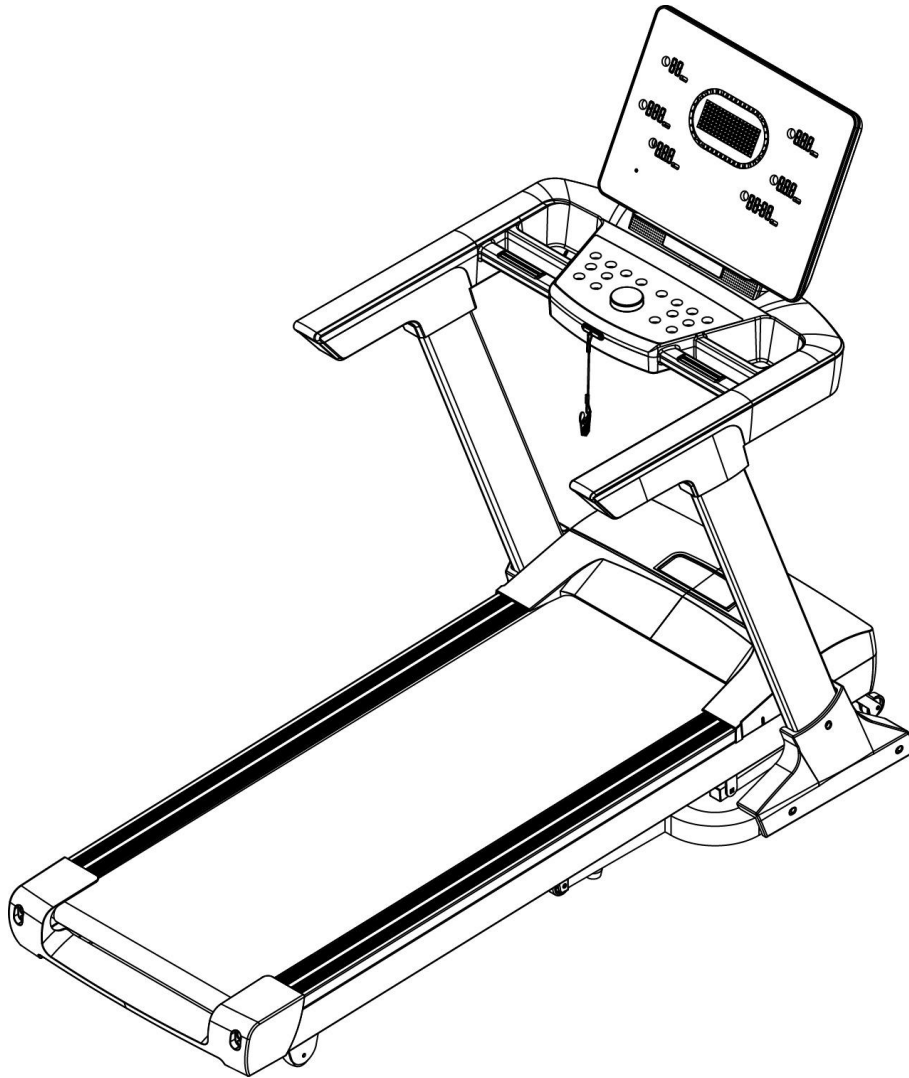

Art.N: BF-T4000

Илюстрациите са ориентировъчни. Възможни са дребни конструктивни или визуални разлики, които не променят безопасния монтаж и експлоатация.

## Съдържание

| №  | Раздел                                       |
|----|----------------------------------------------|
| 1  | Указания за безопасност                      |
| 2  | Комплектовка и инструменти                   |
| 3  | Монтаж                                       |
| 4  | Преместване, сгъване и разгъване             |
| 5  | Техническа информация                        |
| 6  | Заземяване и електрическа безопасност        |
| 7  | Конзола и органи за управление               |
| 8  | Режими на работа и програми                  |
| 9  | Свързване с приложението FitShow             |
| 10 | Почистване, смазване и регулиране на лентата |
| 11 | Кодове за грешки                             |
| 12 | Разглобена схема                             |
| 13 | Сервизен списък на частите                   |
| 14 | Изхвърляне и рециклиране                     |
| 15 | Данни за вносител и дистрибутор              |

### ВАЖНО

Прочети инструкцията изцяло преди монтаж и употреба. Запази я за бъдещи справки и я предай на всеки следващ ползвател на уреда. Запази документа за покупката, гаранционния документ, настоящото упътване и оригиналния кашон през целия период на ползване.

## 1. Указания за безопасност

### ПРЕДУПРЕЖДЕНИЕ ЗА ЗДРАВЕТО

Преди употреба се консултирай с лекар или друг квалифициран медицински специалист, ако имаш установено заболяване, сърдечно-съдови проблеми, високо или ниско кръвно налягане, диабет, проблеми със ставите или гръбначния стълб, приемаш лекарства, възстановяваш се след травма или операция, бременна си или дълго време не си спортувал. При болка в гърдите, замайване, прилошаване, задух, необичайно сърцебиене или друга необичайна болка спри незабавно и потърси медицинска помощ. Използването на уреда е на отговорността на ползвателя. Производителят, вносителът и дистрибуторът не носят отговорност за травми или щети, причинени от неспазване на тази инструкция, неправилен монтаж, употреба при медицински противопоказания, самоволни промени или неоторизиран ремонт.


- Постави уреда върху чиста, суха и равна твърда повърхност. Не го използвай на открито, във влажни помещения или в близост до вода.
- Остави свободна зона зад пътеката и дръж деца и домашни любимци далеч от уреда по време на монтаж и употреба.
- Преди всяка употреба провери дали бягащото платно е центрирано, дали няма видими повреди и дали всички достъпни крепежни елементи са затегнати.
- Закрепи щипката на предпазния ключ към дрехата си. Уредът не трябва да стартира без правилно поставен предпазен ключ.
- Носи подходящи спортни обувки с чисти подметки. Не използвай уреда бос, с чорапи, с обувки на висок ток или с широки и висящи дрехи.
- Не стартирай уреда, докато стоиш върху бягащото платно. Стъпи върху страничните площадки, стартирай на ниска скорост и едва след това премини върху платното.

- Не поставяй предмети в отворите и не допускай кърпи, кабели или дрехи да попаднат в движещите се части.
- Ако уредът ускори неочаквано или работи необичайно, издърпай предпазния ключ, слез от платното и изключи захранването.
- Свързвай уреда директно към подходящ заземен контакт. Не използвай повреден контакт, преходник, разклонител или удължител.
- Преди почистване, смазване, регулиране или преместване изключи главния прекъсвач и извади щепсела.
- Не сваляй моторния капак. Вътрешните проверки и ремонти се извършват само от квалифициран сервиз.

## 2. Комплектовка и инструменти

Отвори опаковката внимателно и провери наличността на основните части и инструменти преди монтажа.

| №   | Наименование            | Спец.          | Бр. | №   | Наименование                                                  | Спец.    | Бр. |
|-----|-------------------------|----------------|-----|-----|---------------------------------------------------------------|----------|-----|
| 1   | Основна рама – комплект |                | 1   | 82  | Назъбена стопорна шайба                                       | 10       | 4   |
| 12  | Комбиниран ключ         | S=13\ 14\ 15mm | 1   | 8   | Панел – комплект                                              |          | 1   |
| 13  | Шестостенен ключ        | 5mm            | 1   | 67  | Винт с вътрешен шестостен, плоска глава                       | M8*16    | 8   |
| 14  | Шестостенен ключ        | 6mm            | 1   | 75  | Cross recessed pan head self-tapping and self-drilling screws | ST4.2*19 | 6   |
| 5   | Конзола – комплект      |                | 1   | 68  | Винт с вътрешен шестостен, плоска глава                       | M10*70   | 4   |
| 32  | Ляв долен капак         |                | 1   | 66  | Hexagon socket head screws                                    | M8*12    | 4   |
| 31  | Десен долен капак       |                | 1   | 53  | Захранващ кабел                                               |          | 1   |
| 103 | MP3                     | To order       | 1   | 46  | Флаконт с лубрикант                                           |          | 1   |
| 49  | Предпазен ключ          |                | 1   | 99  | Долен капак на лява ръкохватка                                |          | 1   |
| 86  | Назъбена стопорна шайба | 8              | 8   | 100 | Right armrest lower cover                                     |          | 1   |

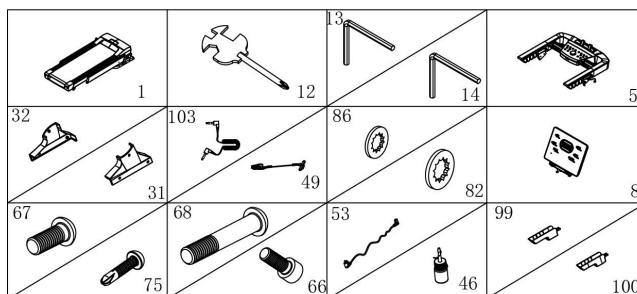



Фиг. 1. Основни части и принадлежности в опаковката

**Не включвай захранващия кабел, преди монтажът да е напълно завършен.**


### 3. Монтаж

#### ПРЕДИ МОНТАЖ

Поради теглото и размерите на уреда се препоръчва монтажът да се извърши от двама възрастни. Не притискай кабели между металните части и не затягай окончателно винтовете, преди всички отвори да са подравнени.

#### Стъпка 1 – Колони и основа


- Повдигни внимателно лявата и дясната колона, както е показано на илюстрацията.
- Закрепи ги към основата с указаните винтове и шайби. Първоначално затегни леко.

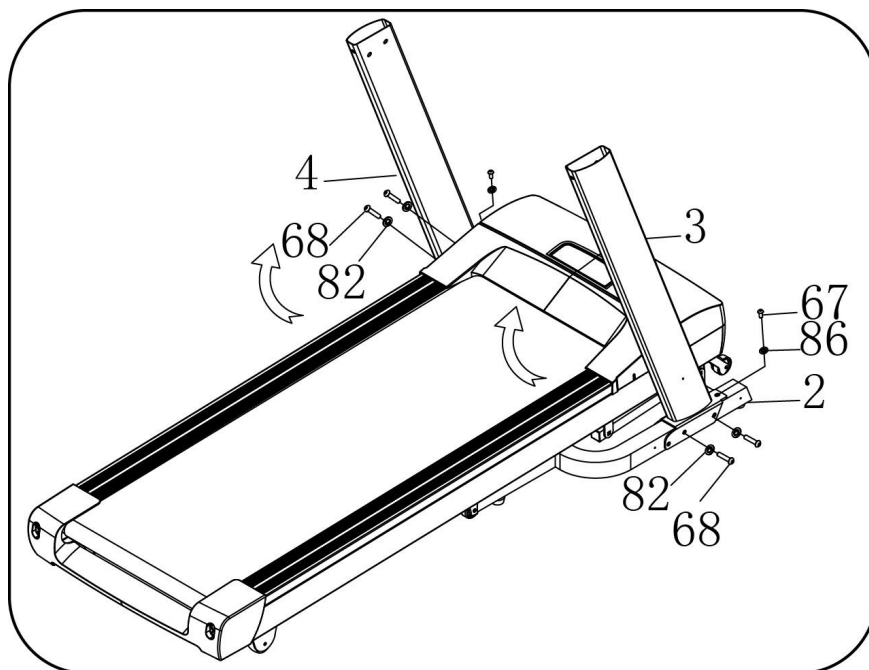

Фиг. 2. Закрепване на колоните към основата

#### Стъпка 2 – Монтаж на конзолата


- Позиционирай конзолата над колоните.
- Свържи съответните кабели, без да ги усукваш или прещипваш.
- Фиксирай конзолата с указаните винтове и шайби, след което подравни и затегни равномерно.

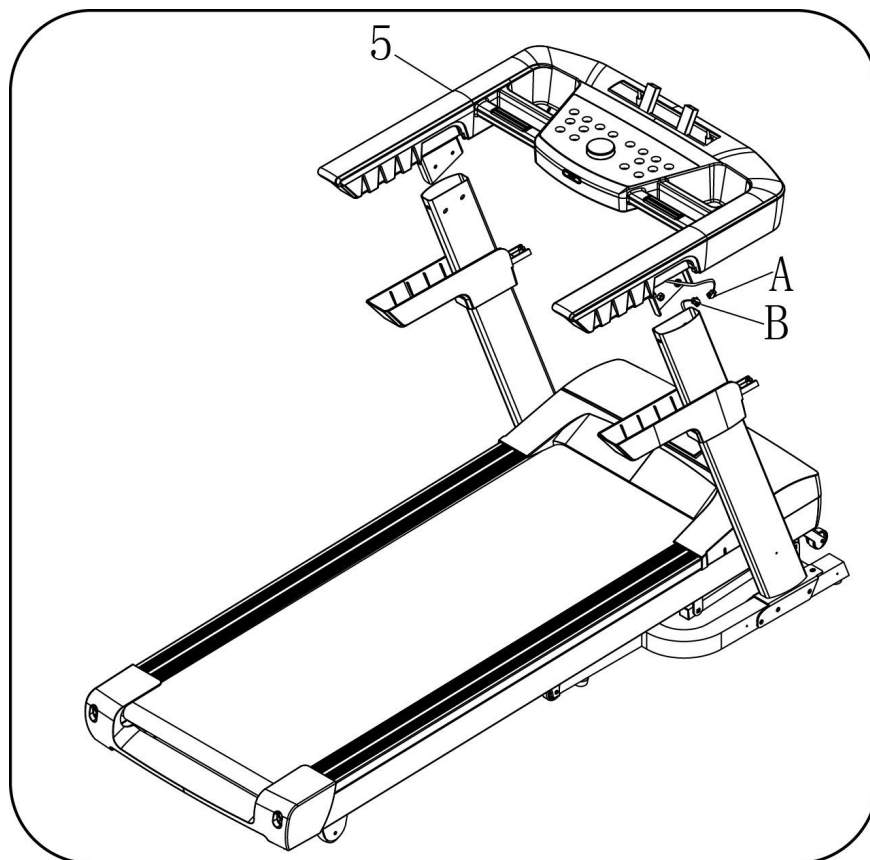

Фиг. 3. Монтаж на конзолата

### Стъпка 3 – Капаци и финална проверка


- Монтирай защитните капаци и декоративните елементи.
- Постави предпазния ключ в обозначеното място на конзолата.
- Свържи захранващия кабел към уреда едва след окончателна проверка на конструкцията и крепежните елементи.

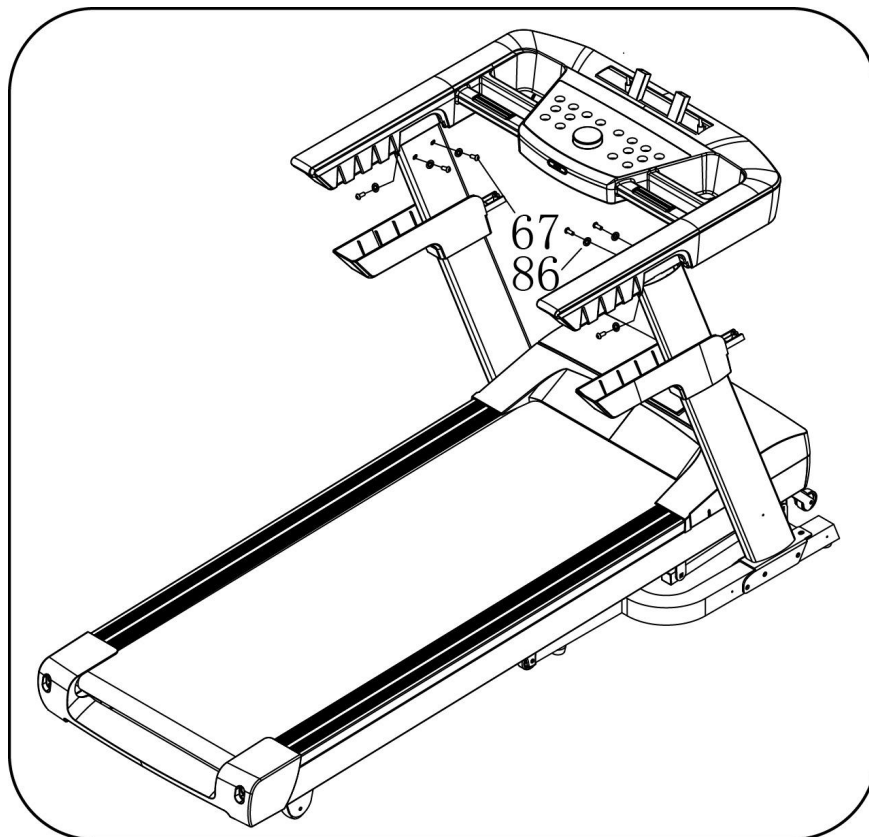

Фиг. 4. Монтаж на капците и завършване на монтажа


#### 4. Преместване, сгъване и разгъване

- Преди преместване изключи уреда, извади щепсела и прибери кабела.
- Повдигни задната част на рамата, докато транспортните колела докоснат пода, и премествай бавно върху равна твърда повърхност.
- Не дърпай и не повдигай уреда за конзолата или дисплея.

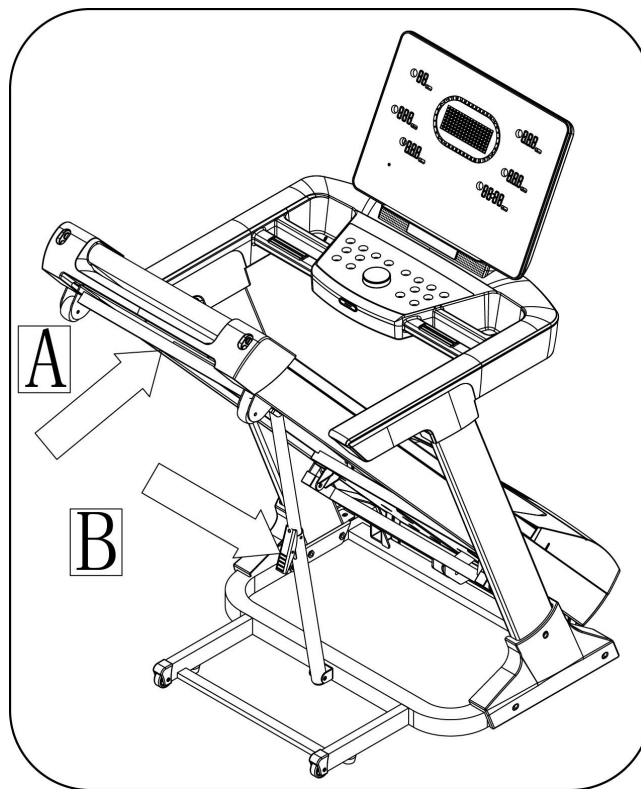

Фиг. 5. Положение при сгъване

- При разгъване освободи пространството зад и под уреда.
- Поддържай бягащата платформа с ръка, освободи заключването и насочвай платформата надолу.
- Не оставяй платформата да пада свободно.

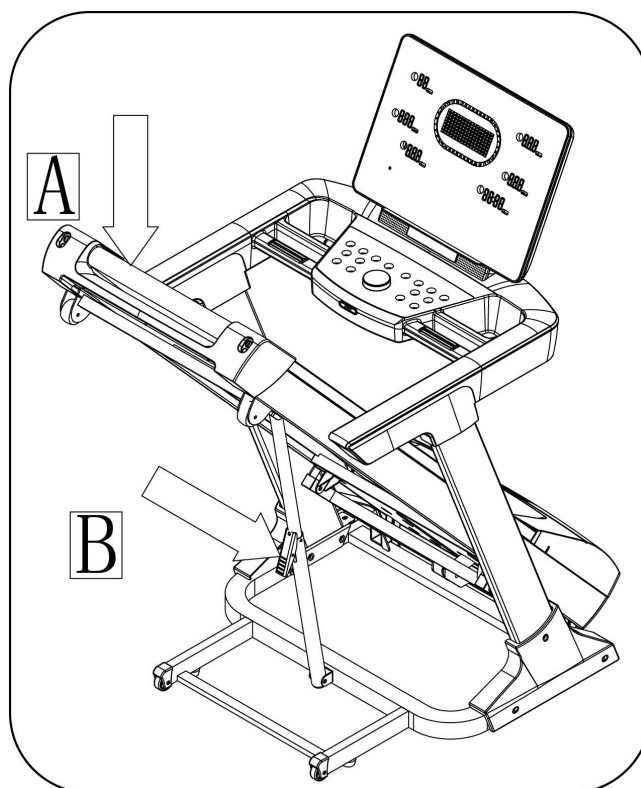


Фиг. 6. Разгъване на бягащата платформа

## 5. Заземяване и електрическа безопасност



- Уредът трябва да бъде заземен. При повреда заземяването намалява риска от токов удар.
- Използвай само контакт, монтиран и заземен съгласно действащите електротехнически изисквания.
- Не променяй фабричния щепсел. Ако той не съответства на контакта, обърни се към квалифициран електротехник.
- Не използвай преходник, който премахва или заобикаля защитния проводник.

## 6. Конзола и органи за управление

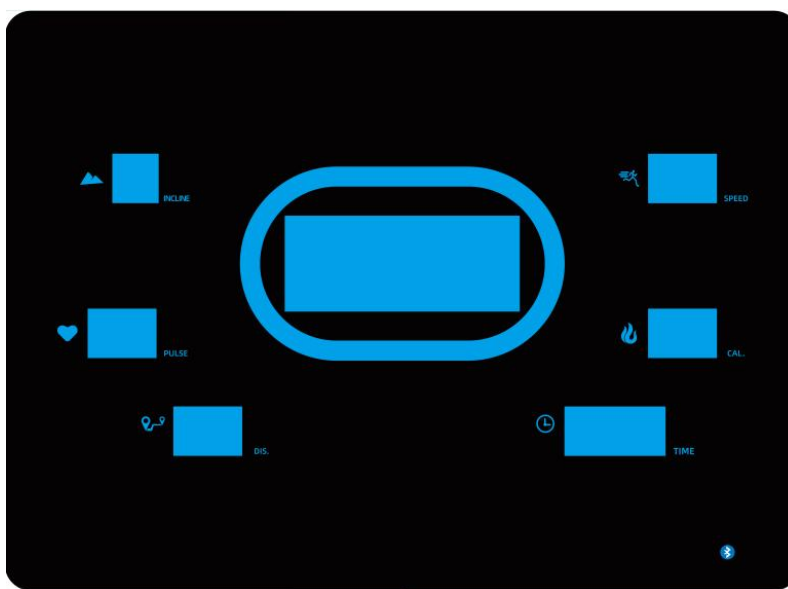

Фиг. 7. Обзор на конзолата

Типичните бутони и полета включват START, STOP, MODE, PROG, SPEED +/-, INCLINE +/- и основните дисплейни прозорци за скорост, време, дистанция, калории и наклон.

- Измерването на пулса чрез ръкохватките, ако се използва, е ориентировъчно и не е медицинско измерване.
- За по-стабилно отчитане хвани двата сензора с чисти и сухи ръце, без да стискаш прекомерно.

## 7. Режими на работа и програми

- Бърз старт: след поставяне на предпазния ключ и включване на захранването натисни START. След 3-секундно обратно броене пътеката стартира с най-ниската скорост или със стандартната скорост на избраната програма.
- Режими с обратно броене: натисни MODE, за да избереш цел по време, дистанция или калории. Задай стойността и натисни START.
- Предварително зададени програми: уредът разполага с програми P01–P20. Всяка програма е разделена на 16 сегмента и автоматично регулира скоростта и наклона.
- Потребителски програми: U1, U2 и U3 позволяват персонализирана тренировка. Фабричните начални стойности са U1 = 1 km/h, наклон 0; U2 = 2 km/h, наклон 0; U3 = 3 km/h, наклон 0.
- Функция FAT / Body Fat: функцията е ориентировъчна и не трябва да се използва за медицинска оценка или диагноза.
- По време на работа можеш да променяш скоростта и наклона с предназначените бутони. За нормално спиране използвай STOP. Предпазният ключ е само за аварийно спиране.

## 8. СВЪРЗВАНЕ С ПРИЛОЖЕНИЕТО FITSHOW APP

1. Сканирайте следния QR код, за да изтеглите приложението Fitshow, след което се регистрирайте и влезте в профила си.



- Включете Bluetooth на мобилния телефон и отворете приложението Fitshow.
- Натиснете „Indoor Sports“, за да влезете в спортния режим.
- Чрез Bluetooth сканирайте за намиращата се наблизо бягаща пътека и натиснете „Device Connection“.
- След като бягащата пътека е готова, можете да изберете режим на тренировка и да започнете бягането.
- Натиснете „Stop“, за да приклучите бягането.
- Ако изминатото разстояние не надвишава 200 метра, ще се появи изскачащ прозорец. Натиснете „Stop“, за да приклучите тренировката, или „Cancel“, за да продължите.
- След края на бягането системата ще възпроизведе гласово обобщение на тренировъчната информация.

Имената и разположението на бутоните в приложението могат да се променят при актуализации. Следвай текущите указания на екрана. Bluetooth управлението не заменя предпазния ключ.

## 9. ВАЖНО: Смазване и почистване

---

Винаги изключвайте пътеката от контакта преди почистване или обслужване.

Редовното почистване удължава живота на пътеката. Почиствайте праха, откритата част на плота от двете страни на лентата и страничните лайсни. Носете чисти спортни обувки, за да намалите натрупването на замърсявания под лентата.

Поне веднъж годишно сваляйте капака на мотора и почиствайте с прахосмукачка под него.

### Смазване на бягащата лента и плота


Пътеката е с предварително смазан плот. Триенето между лентата и плота влияе върху работата и живота на уреда, затова е нужна периодична смазка на 40 часа работа. При липса на навременна поддръжка моторът може да се повреди, а гаранцията да отпадне

Лентата не трябва да е нито прекалено хлабава, нито прекалено стегната. Разстоянието между плота и лентата от двете страни трябва да е равномерно.

#### Начин на смазване:

При изключена пътека повдигнете лентата и нанесете равномерно **силиконовата смазка** за бягащи пътеки с ръка или чрез специален **силиконов спрей** по цялата повърхност между плота и лентата. След това пуснете пътеката на ниска скорост и леко притискайте лентата.

Не нанасяйте прекомерно количество смазка, тъй като това може да доведе до приплъзване на лентата. При наличие на излишна смазка тя трябва да бъде отстранена с чиста кърпа.

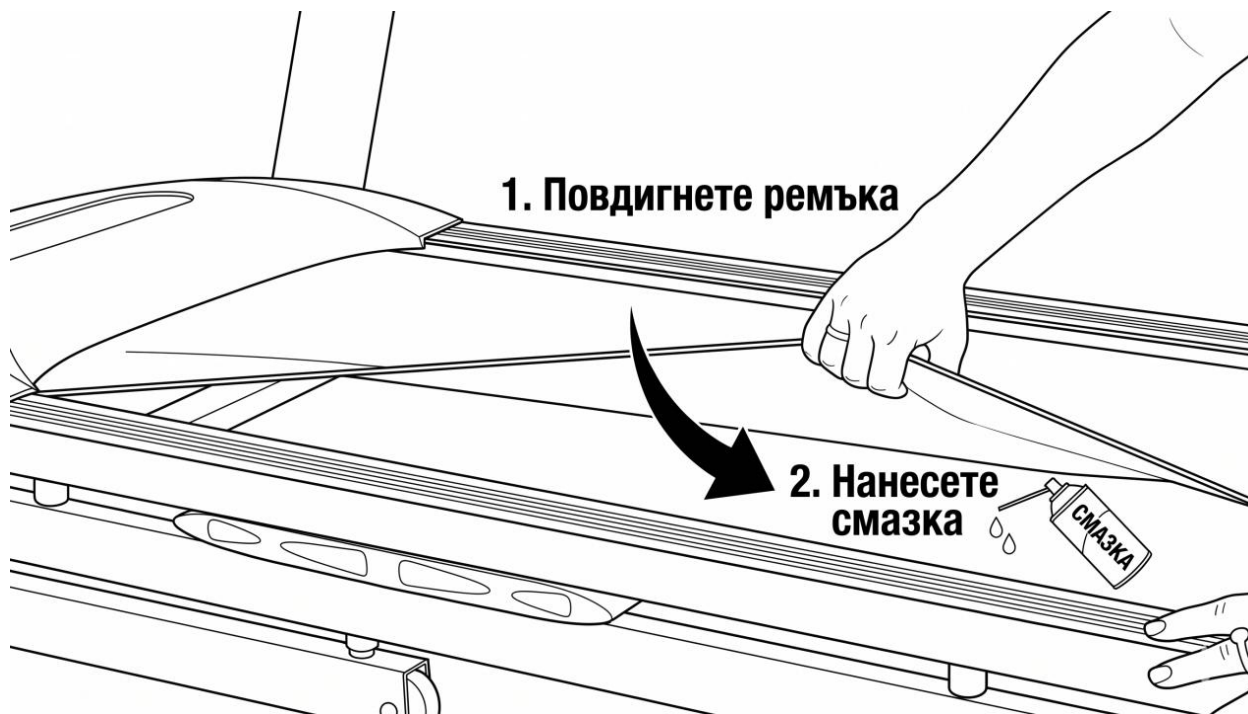

## 9. ЦЕНТРИРАНЕ И РЕГУЛИРАНЕ НА БЯГАЩАТА ЛЕНТА

а) Стартирайте пътеката на скорост до 3 km/h, без човек върху нея.

**б) Ако лентата се измества надясно:**

- завъртете десния регулиращ болт по посока на часовниковата стрелка с  $\frac{1}{2}$  оборот с шестограмен ключ;
- завъртете левия болт обратно на часовниковата стрелка с  $\frac{1}{2}$  оборот.

(виж снимка 1)

**в) Ако лентата се измества наляво:**

- завъртете левия регулиращ болт по посока на часовниковата стрелка с  $\frac{1}{2}$  оборот;
- завъртете десния болт обратно на часовниковата стрелка с  $\frac{1}{2}$  оборот.

(виж снимка 2)





**г) Ако лентата не се измества, но преплъзва:**

- завъртете едновременно левия и десния болт по посока на часовниковата стрелка с  $\frac{1}{2}$  оборот, за да я опънете;

д) Ако лентата е прекалено стегната:

- завъртете и двата болта обратно на часовниковата стрелка с  $\frac{1}{2}$  оборот, за да я разхлабите. (виж снимки 3 и 4)

След всяка корекция оставете пътеката да работи няколко минути, проверете центрирането и при необходимост повторете регулирането.

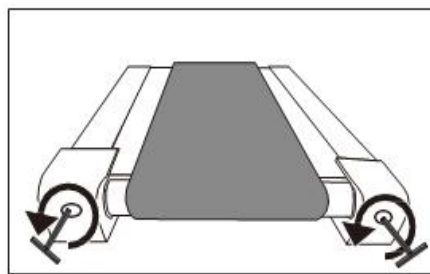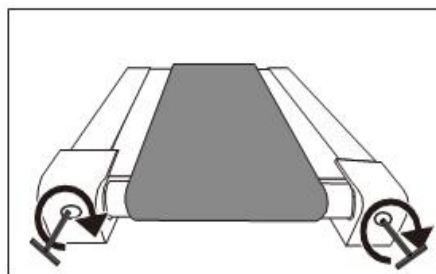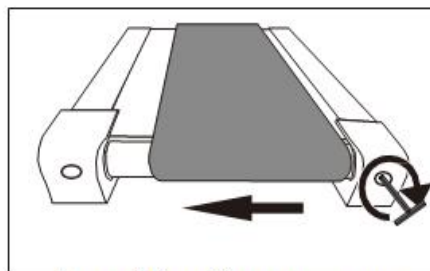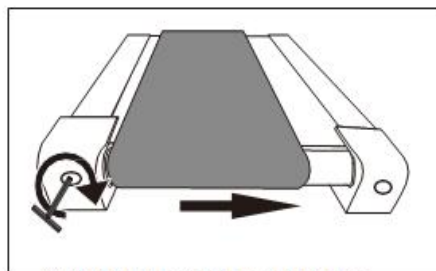

Снимка 3. Затягане на лентата

Снимка 4. Разхлабване на лентата

### НЕ РАБОТИ ПРОДЪЛЖИТЕЛНО БЕЗ ПРЕКЪСВАНЕ

След приблизително 60 минути непрекъсната работа изключи уреда и го остави да се охлади поне 10 минути.




Всяка вътрешна поправка или електрическа намеса трябва да се извършва само от квалифициран сервиз.

## 11. Кодове за грешки

| Код | Значение                                      | Действие                                                                                                                                                   |
|-----|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E01 | Лоша комуникация между конзолата и контролера | Изключи уреда, провери комуникационния кабел и конекторите, след което рестартирай. Ако грешката се повтори, е необходим сервиз.                           |
| E02 | Защитна / ударна грешка                       | Провери захранващото напрежение, състоянието на контролера и окабеляването на мотора. Рестартирай след отстраняване на причината.                          |
| E03 | Липса на сигнал от датчика за скорост         | Провери дали датчикът за скорост е свързан, повреден или неправилно позициониран.                                                                          |
| E05 | Защита от свръхток                            | Провери за необичайно съпротивление на лентата, тежко механично натоварване, мирис от мотора или прегряване на контролера. Рестартирай само след проверка. |
| E06 | Грешка при самотест на контролера             | Изключи и рестартирай. Ако грешката остане, е необходима проверка на контролера.                                                                           |
| E07 | Липсващ параметър                             | Възможно е да е необходима смяна на контролера или сервизна настройка.                                                                                     |
| E08 | Повредена EEPROM памет                        | Възможно е да е необходима смяна на контролера или сервизна настройка.                                                                                     |

## 12. Разглобена схема

Разглобената схема е предназначена за идентифициране на части, а не за самостоятелно разглобяване на уреда.

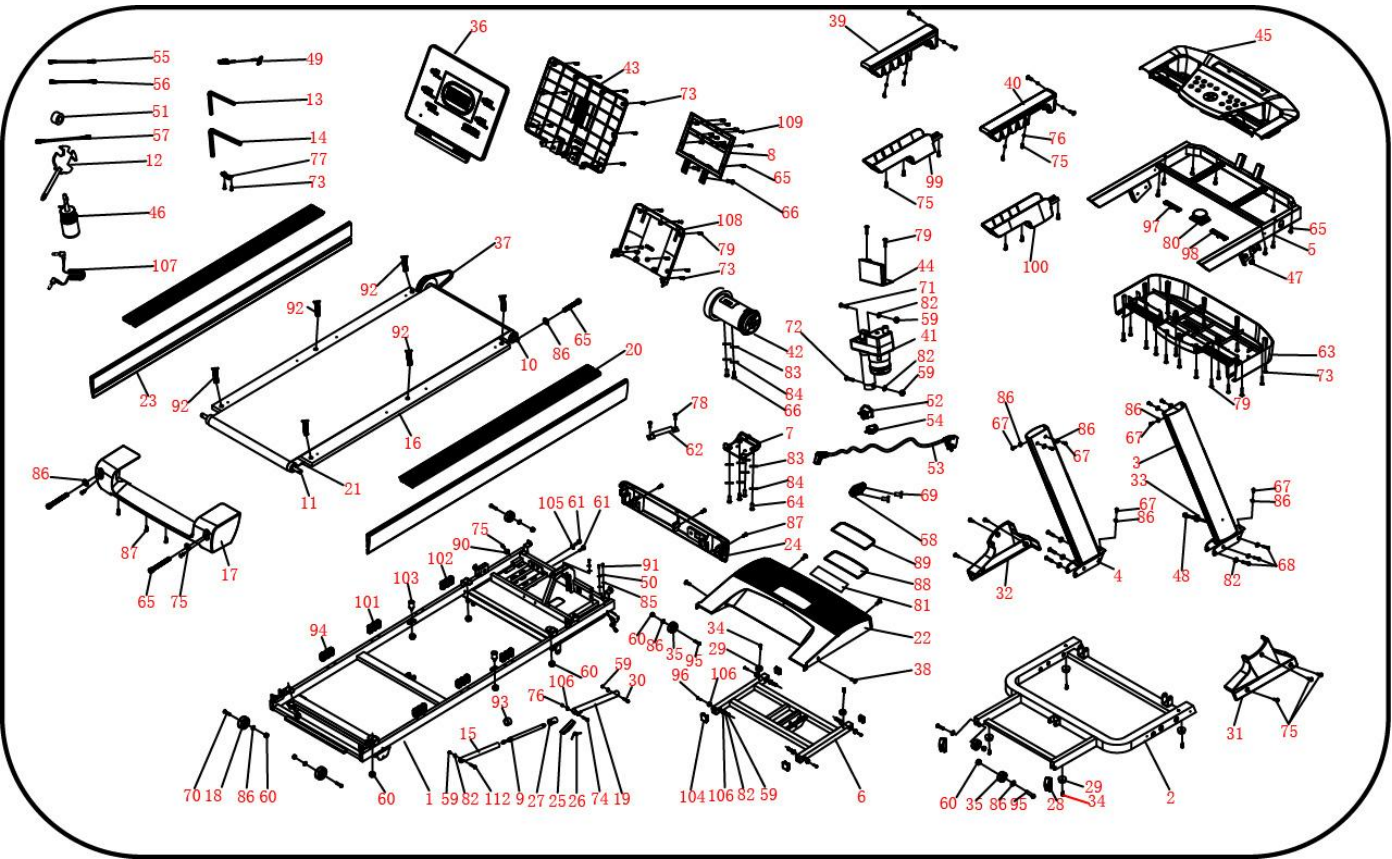

Фиг. 11. Разглобена схема на Bodyflex PRO T4000

## 13. Сервизен списък на частите

Следващият списък запазва оригиналната фабрична терминология за по-лесно поръчване на резервни части.

| Serial number | Name                      | Specification | Quantity | Serial number | Name                                   | Specification | Quantity |
|---------------|---------------------------|---------------|----------|---------------|----------------------------------------|---------------|----------|
| 1             | Main frame assembly       |               | 1        | 46            | Oil bottle                             |               | 1        |
| 2             | Base frame assembly       |               | 1        | 47            | Upper segment line of electronic watch |               | 1        |
| 3             | Right column group        |               | 1        | 48            | Lower segment line of electronic watch |               | 1        |
| 4             | Left column group         |               | 1        | 49            | Safety lock                            |               | 1        |
| 5             | Electronic watch assembly |               | 1        | 50            | Standard spring washer                 | 5             | 2        |
| 6             | Lifting frame assembly    |               | 1        | 51            | Magnetic ring                          |               | 1        |
| 7             | Motor seat assembly       |               | 1        | 52            | Power switch                           |               | 1        |

|    |                                      |                  |   |    |                                                               |                           |    |
|----|--------------------------------------|------------------|---|----|---------------------------------------------------------------|---------------------------|----|
| 8  | Panel assembly                       |                  | 1 | 53 | Standard power cord                                           |                           | 1  |
| 9  | Pneumatic rod                        |                  | 1 | 54 | Overload protector                                            |                           | 1  |
| 10 | Front drum                           |                  | 1 | 55 | AC single branch                                              |                           | 1  |
| 11 | Rear drum                            |                  | 1 | 56 | Blue single branch                                            |                           | 1  |
| 12 | With cross wrench                    | S = 13, 14, 15   | 1 | 57 | Brown single branch                                           |                           | 1  |
| 13 | 5 # hexagon wrench                   | 5mm              | 1 | 58 | Power cord socket                                             |                           | 1  |
| 14 | 6 # hexagon wrench                   | 6mm equal length | 1 | 59 | Type I non-metallic insert hexagon lock nut                   | M10                       | 8  |
| 15 | Adjusting rod assembly               |                  | 1 | 60 | Type I non-metallic insert hexagon lock nut                   | M8                        | 12 |
| 16 | Running board                        |                  | 1 | 61 | Hexagon head screws Class C                                   | M8*35                     | 2  |
| 17 | Rear angle guard                     |                  | 1 | 62 | Backlight plate tabletting                                    |                           | 1  |
| 18 | Transparent adjusting roller         |                  | 2 | 63 | Lower cover of electronic watch                               |                           | 1  |
| 19 | Adjusting lever                      |                  | 1 | 64 | Hexagon socket pan head screw                                 | M8*32                     | 4  |
| 20 | Side strip                           |                  | 2 | 65 | Cross recessed pan head tapping screws with pad               | 4.2*15                    | 12 |
| 21 | Running belt                         |                  | 1 | 66 | Hexagon socket head screws                                    | M8*12                     | 6  |
| 22 | Motor cover                          |                  | 1 | 67 | Hexagon socket flat round head screw                          | M8*16                     | 8  |
| 23 | Side strip                           |                  | 2 | 68 | Hexagon socket flat round head screw                          | M10*70                    | 6  |
| 24 | Motor front cover                    |                  | 1 | 69 | Cross recessed pan head screws                                | M4*20                     | 2  |
| 25 | Safety pedal assembly                |                  | 1 | 70 | Hexagon socket flat round head screw                          | M8*50                     | 2  |
| 26 | Torsion spring                       |                  | 1 | 71 | Hexagon socket flat round head screw                          | M10*45                    | 1  |
| 27 | Intertubular bushing                 |                  | 1 | 72 | Hexagon socket flat round head screw                          | M10*60                    | 1  |
| 28 | Roller shield                        |                  | 2 | 73 | Cross recessed pan head tapping screws                        | 4.2*13 (scraping pin end) | 33 |
| 29 | Foot pad                             |                  | 6 | 74 | Cross recessed pan head screws                                | M6*40                     | 1  |
| 30 | Hexagon socket flat round head screw | M10*50           | 1 | 75 | Cross recessed pan head self-tapping and self-drilling screws | ST4.2*19                  | 15 |
| 31 | Right base shield                    |                  | 1 | 76 | Type I non-metallic insert                                    | M6                        | 1  |

|    |                                                                             |        |   |    |                                                                             |            |    |
|----|-----------------------------------------------------------------------------|--------|---|----|-----------------------------------------------------------------------------|------------|----|
|    |                                                                             |        |   |    | hexagon lock nut                                                            |            |    |
| 32 | Left base shield                                                            |        | 1 | 77 | Safety lock base                                                            |            | 1  |
| 33 | Annular thread guard plug                                                   |        | 2 | 78 | Cross recessed pan head tapping screws                                      | ST2.9*6. 5 | 2  |
| 34 | Cross recessed pan head self-tapping and self-drilling screws               | 4.2*25 | 6 | 79 | Cross recessed pan head self-tapping and self-drilling screws               | ST4.2*12   | 13 |
| 35 | Carrying wheel                                                              |        | 2 | 80 | Flying shuttle                                                              |            | 1  |
| 36 | Panel upper cover                                                           |        | 1 | 81 | Backlight plate                                                             | To order   | 1  |
| 37 | Multi-wedge belt                                                            |        | 1 | 82 | Internal serrated lock washer                                               | 10         | 14 |
| 38 | Self-tapping and self-drilling screws with cross recessed disc head and pad | 4.8*19 | 4 | 83 | Plain washer class C                                                        | 8          | 6  |
| 39 | Left foam armrest                                                           |        | 1 | 84 | Standard spring washer                                                      | 8          | 6  |
| 40 | Right foam armrest                                                          |        | 1 | 85 | Internal serrated lock washer                                               | 5          | 2  |
| 41 | Lifting motor                                                               |        | 1 | 86 | Internal serrated lock washer                                               | 8          | 19 |
| 42 | DC motor                                                                    |        | 1 | 87 | Self-tapping and self-drilling screws with cross recessed disc head and pad | ST4.2*19   | 6  |
| 43 | Lower panel cover                                                           |        | 1 | 88 | Acrylic plate                                                               | To order   | 1  |
| 44 | Control circuit board                                                       |        | 1 | 89 | Chrome-plated frame                                                         | To order   | 1  |
| 45 | Upper cover of electronic watch                                             |        | 1 | 90 | Side strip buckle                                                           |            | 2  |

| Serial number | Name                                  | Specification | Quantity | Serial number | Name | Specification | Quantity |
|---------------|---------------------------------------|---------------|----------|---------------|------|---------------|----------|
| 91            | Cross recessed pan head screws        | M5*8          | 2        | 113           |      |               |          |
| 92            | Hexagon socket countersunk head screw | M8*32         | 6        | 114           |      |               |          |
| 93            | Adjusting rod spacer sleeve           |               | 1        | 115           |      |               |          |
| 94            | Buffer pad                            | Yellow        | 2        | 116           |      |               |          |
| 95            | Hexagon socket flat round head screw  | M8*40         | 4        | 117           |      |               |          |
| 96            | Square neck screws with round head    | M10*55        | 4        | 118           |      |               |          |
| 97            | Left pulse iron plate                 |               | 2        | 119           |      |               |          |
| 98            | Right pulse iron sheet                |               | 2        | 120           |      |               |          |
| 99            | Lower cover of left armrest           |               | 1        | 121           |      |               |          |

|     |                                   |            |   |     |  |  |  |
|-----|-----------------------------------|------------|---|-----|--|--|--|
| 100 | Right armrest<br>lower cover      |            | 1 | 122 |  |  |  |
| 101 | Buffer pad                        | Blue       | 2 | 123 |  |  |  |
| 102 | Buffer pad                        | Red        | 2 | 124 |  |  |  |
| 103 | Buffer pad                        | φ 25*30*M8 | 2 | 125 |  |  |  |
| 104 | Plug in square<br>pipe            |            | 4 | 126 |  |  |  |
| 105 | Plain washer class<br>C           | 8*24       | 1 | 127 |  |  |  |
| 106 | Casing                            |            | 8 | 128 |  |  |  |
| 107 | MP3 line                          |            | 1 | 129 |  |  |  |
| 108 | Panel rear cover<br>plate         |            | 1 |     |  |  |  |
| 109 | Cross recessed<br>pan head screws | M6*20      | 6 |     |  |  |  |
| 110 |                                   |            |   |     |  |  |  |
| 111 |                                   |            |   |     |  |  |  |
| 112 |                                   |            |   |     |  |  |  |

# ИЗХВЪРЛЯНЕ, ВНОСИТЕЛ И СЕРВИЗНА ИНФОРМАЦИЯ

---

Този продукт има електрическо или електронно оборудване. След края на експлоатационния му срок не го изхвърляй като несортиран битов отпадък. Раздели електронните елементи, металните, пластмасовите, текстилните, пенообразните и картонените части, доколкото това може да се направи безопасно, и ги предай за повторна употреба или рециклиране според местните правила. Не изгаряй тапицерията, пяната или пластмасовите части.

## ДАННИ ЗА ВНОСИТЕЛ И ДИСТРИБУТОР

**Sportensklad.bg**

Соларшоп ЕООД

Адрес: гр. Пазарджик, ул. „Димчо Дебелянов“ 27

**[www.sportensklad.bg](http://www.sportensklad.bg)**

## Резервни части, гаранция и рекламации

При заявка за резервна част посочи модела, art.N:, номера на частта от схемата и CNº от фабричната табелка, която се намира отзад на уреда.

Запази документа за покупката (гаранционния документ), настоящото упътване и оригиналния кашон през целия гаранционен срок. Оригиналната опаковка осигурява по-безопасно транспортиране на уреда при необходимост от сервиз.

Въпроси и рекламации може да пуснете най-лесно през сайта [www.sportensklad.bg](http://www.sportensklad.bg)

---

Стремим се винаги да получавате най-актуалната информация, но поради постоянните подобрения от страна на производителя са възможни леки разминавания между упътването и реалния уред. Тъй като ръководството е базово, някои от описаните функции може да не са налични за вашия модел. С предимство винаги са характеристиките, посочени в продуктовата страница на сайта или в магазина при покупката.