


BODY**F****LEX**[®]

MAS 7

MASSAGE CHAIR

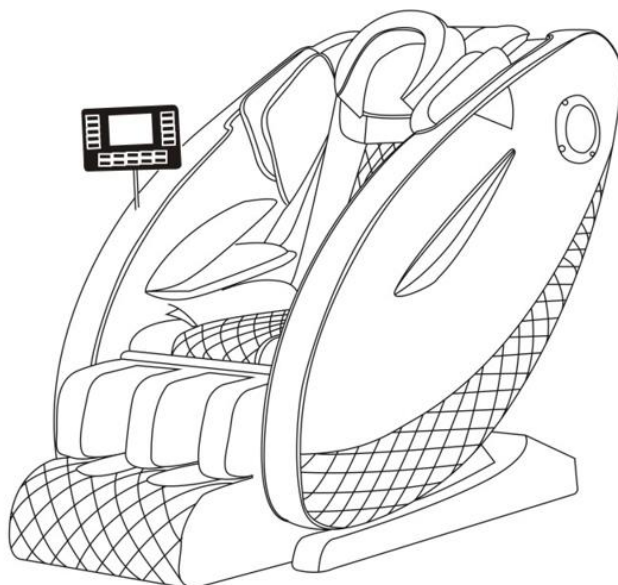

art. BF-MASCH7

Living Art

Thank you for choosing our massager products.

This massage chair is ergonomically designed to massage the back, waist, buttocks, legs, hands and other parts. It is a luxury high-end massage chair with various massage methods, such as warm feeling and hot compress, vibration and airbag extrusion massage.

Before use, please read this manual carefully, and pay special attention to security considerations, in order to ensure the correct operation and make the product, the manual safety, so that the query in the future.

CATALOGUE

The preparation for massage	1
Safety matters	4
Installation preparation	7
Structure name	11
The control panel	13
Massage program operation	14
Manual device instructions	15
Massage program operation	19
Daily maintenance	20
Troubleshooting	21
Technical parameters	21

PREPARATION BEFORE MASSAGE

1. Safety precautions

(1) Before use, check whether the power adapter conforms to the specified parameters and whether the output polarity matches

(2) When pulling out the power cord, hold the plug of the power cord instead of the power cord

(3) Do not lift the power cord so that the machine is suspended or shaken, which may easily lead to the failure of the power cord core and its normal operation


(4) Do not allow heavy objects to press on the power cord or the manual controller

(5) Do not throw the machine or throw it into the ground or water

(6) Do not use the machine in a damp environment

(7) Do not operate the manual controller with wet hands

(8) Do not pull the wire of the hand controller.

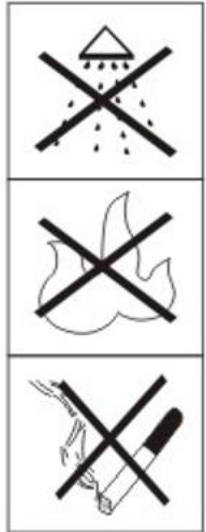

**2. IN THE FOLLOWING CASES, PLEASE IMMEDIATELY STOP
USING AND REMOVE THE POWER CORD PLUG FROM THE
SOCKET**

- (1)The power cord is broken or damaged.
- (2)Accidentally splash water on the product or the manual controller.
- (3)Relevant accessories are damaged or internal parts are exposed.
- (4)Feel abnormal during massage (such as severe pain, smoke, odor, etc).
- (5)When power is suddenly cut off, when lightning is generated, when driving at high speed.

3. PAY ATTENTION TO

- (1) During the massage, knead the head close to both sides of the neck, or it may cause pain.
- (2) Do not use it during sleep or within 30 minutes after meals.
- (3) Do not use this product when you are drunk or unwell.
- (4) Do not directly massage the head, knead and knead the roller and stick it on the elbow joint, knee, chest or abdomen.
- (5) The continuous use time should not exceed 30 minutes. After using the power plug, let the machine rest for 10-20 minutes to extend the life of the machine.



Do not leave the massage chair or its parts in contact with any person less than 18 years of age or less than 18 years of age who has no control over his or her own behavior (e.g., mentally ill, mentally disabled, paraplegic, etc.) alone, which may cause electric shock or injury to the user or malfunction of the parts

SAFETY MATTERS

1. Do not insert any articles or flammable objects into the massager. This may cause electric shock, malfunction or fire
2. If you feel any discomfort during massage, please stop the operation immediately
3. When using, do not cover the massager, so as not to cause too high temperature and failure or fire.
4. This product is not intended for self-diagnosis or treatment: if diagnosis or treatment is required, it should be handled by a medical professional
5. If you are taking medication or have a medical condition, please consult your doctor before using it. If you feel unwell or you are pregnant, please do not use it
6. Use of this product
7. If you are pregnant or during your menstrual period, consult your doctor first and follow your doctor's advice
8. The recommended time limit is 15-30 minutes.
9. Before using the massager again, make sure the massager has been unplugged and stopped using for more than 30 minutes
10. If it is used continuously for a long time, it may start the superheat mats

device and automatically power off. If the surface of the appliance is hot and insensitive to heat, it must be paid attention to when using



Be careful

1. Please avoid using the massager after drinking alcohol or when you are not feeling well.
2. Do not directly massage the head, elbows, knees, chest, abdomen, etc
3. In case of spilling or dumping the liquid on the massager, please remove the power plug from the socket immediately. Do not use your hands when they are wet
4. Install or unplug the plug

Do not damage the power cord. You are operating the massager with damaged wires, which may result in accidental electric shock or mechanical failure.

It is not suitable to use the massager.


1. If any of the following conditions occur, please turn off the switch immediately, cut off the power supply, and contact our company
2. Indiscreet use of water or wine on the massager may cause electric shock
3. The cloth cover of the massager is damaged, and the internal mechanism is exposed

4. If abnormal or severe pain occurs during massage, stop massage immediately and seek medical advice
5. If any malfunction or abnormal condition is detected during use, please stop using immediately
6. In case of interruption of current in use, care should be taken to avoid injury to users due to sudden restoration of power
7. When lightning occurs

STRUCTURE NAME

Installation steps of remote control bracket

1. screw rod inserted into the hole position
2. Turn the screw clockwise to the end Clip shoulder
3. Just hook up the remote control

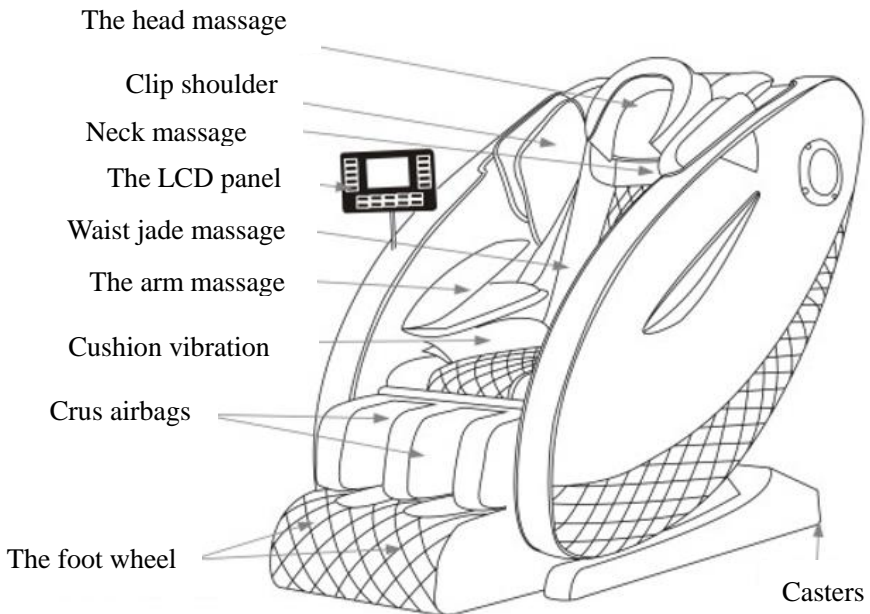

Movement method


When moving to support the lower part of the pad, lift the front move.

Attention!

Do not move people

Do not move with small pulleys on floors that are

prone to damage

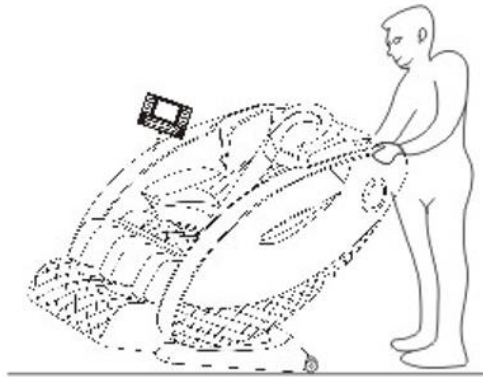

Placement of massage chair

Please leave the proper space around the massage chair when preparing for the massage.


(1)The place where the massage chair is placed should have enough space for the chair to recline and the foot stand to rise.

(2)Make sure there is at least 80cm of space in the back of the massage chair and at least 50cm in the front

(3)Make sure there are no obstacles in front and behind the massage chair

(4) In order to prevent the ground from being damaged, please place a carpet under the massage chair, so as not to damage the ground

THE CONTROL PANEL

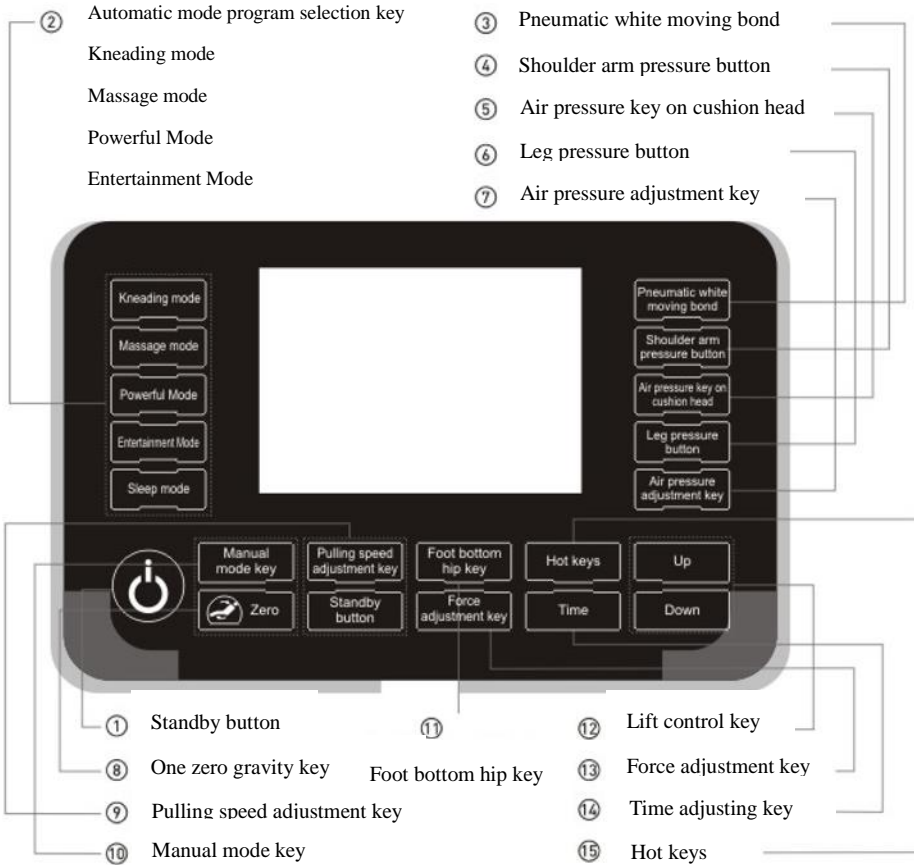

MASSAGE PROCEDURE OPERATION

The power switch

Open or close the massage chair, open the massage chair automatically tilt an Angle, into the automatic mode, close the massage chair automatically reset, reset completed, the screen is off.

Manual massage program

Set up a total of five modes can be selected, each program massage technique collocation is different.

Kneading mode: to enhance the strength of massage, with kneading/air pressure massage massage procedures.

Massage mode: mainly soothing massage, with kneading/air pressure massage massage procedures.

Massage mode: mainly soothing massage, with kneading/air pressure/ massagemassage procedures.

Strong mode: mainly waist and hip massage, with kneading/air pressure/ massage massage procedures.

Entertainment mode: to relax neck and shoulder massage, combined with kneading/air pressure/massage massage procedures

Dormancy mode: light intensity mode, comfortable Angle massage, limited sleep state.

Automatic: press this button to turn on or off the whole body air bag extrusion massage function.

Shoulder arm pressure: Shoulder air bag: press this button to turn on or off the shoulder air bag function.

Cushion head air pressure: Cushion head air bag: press this button to turn on or off the function of cushion head air bagLeg air bag;

Leg air pressure: Leg air bag; Press this button to turn on or off leg airbag function.

Air pressure adjustment: press this button to adjust the extrusion force of the massage chair. Three gears can be adjusted

Zero gravity: zero gravity: press this button massage chair can lie down/ reset.

Speed +: Speed + press this button to increase the strength of the roller on the soles of feet and buttocks, with three levels of strength.

Speed-: Speed-: Press this button to reduce the strength of the roller on the sole of the foot and the hip, with three levels of strength.

Bottom: Bottom roller: press this button to turn on or off the foot roller massage function.

Foot speed: three speed adjustment, 1 gear, 2 gear, 3 gear, this order cycle. Heating: Heating: Press this button to turn on/off waist heating

Time: Timing: The default time is 15 minutes after starting the machine. Use this button to switch the duration. 15, 20, 25, 30 will cycle in this order.


Back up: back up: hold down the key after the back up, release the button to stop posture adjustment

Backrest Down: Backrest Down: Hold down the button and the back down, release the button to stop posture adjustment.

Bluetooth program: open the massage chair, and then open the Bluetooth function of the mobile phone to search (luxurious massage chair) or (universal), and wait for the successful match of the mobile phone.





MANUAL CONTROLLER

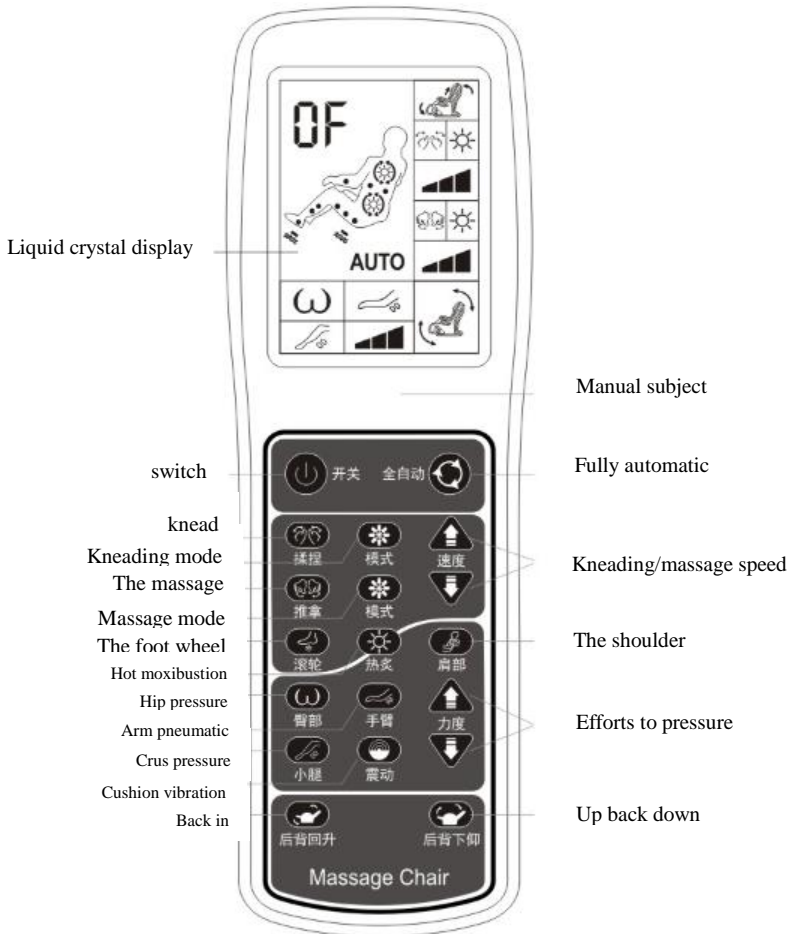OPERATION












MESSAGE PROCEDURE OPERATION

1.Switch on the massage


1. [power] Press the "  " the machine into standby mode. Press "  " again the massage chair to stop working.
2. [fully automatic]: In standby state, press "  " key to enter the automatic working state. At this point, the massage function, speed and intensity cannot be adjusted. Press "  " again to exit the automatic state and select other function keys.



2.Back massage



1. [Kneading]: Press "  " button in standby or working state. After entering the manual working state, start the neck kneading function, LCD displays the corresponding "  ", and then press this button to turn off the function.



2. [Kneading mode]: Press " " button to adjust the direction of neck kneading in manual state, which are positive rotation, reverse rotation and positive rotation respectively.
3. [Massage]: Press " " button in standby or working state to enter into manual working state. Start the waist massage function, and then press this button to turn off the function.
4. [Massage mode]: Press the " " key to adjust the neck kneading direction under manual working condition, respectively: positive turn- reverse- positive turn.
5. [Foot roller]: Press the " " button to open the foot roller massage function, and then click the button to close the function.
6. [Speed]: During manual kneading or massage, press the speed " " " " button to adjust the speed of kneading and massage at the same time. There are three speed adjustments.LCD corresponding display " ".






3. Air pressure massage

1. Shoulder: Press " button in standby or working state to enter manual working state. Start the hip pressure function LCD and then press this button to turn off the function.

2. Buttocks: Press " button in standby or working state, enter manual working state, start buttocks air pressure function, liquid product display "", then press this button to turn off this function.

3. Legs: in standby or work condition according to the " button, enter a state of manual work, start the leg pressure function, liquid crystal display corresponding " and then click this button to close the function.

4. Arm: in standby or work condition according to the " button, enter a state of manual work, start the arm pressure function, and liquid crystal display accordingly "", then click this button to close the function.

5. Strength: Under manual pneumatic massage, press the " " button to adjust the pressure at the same time. There are three speed adjustment gears. Liquid product corresponding display "  ".

4. Heat broiling function

Hot moxibustion: This function is extended, only some models of massage

chairs have this function. In standby or working state, press to turn on and off the hot moxibustion function.

5. Angle adjustment

Backrest adjustment: It is preferable to adjust the Angle of the back according to personal comfort.

6. Bluetooth

30 seconds after the massage chair is turned on. Open the bluetooth setting of the mobile phone, search for nearby Bluetooth devices, and the user will have a look at the new Bluetooth device of his/her mobile phone, which is the Bluetooth device of the massage chair It can be connected successfully and play the Massage chair Bluetooth speaker

TROUBLE REMOVAL

* if encounter problems when using the massager, please refer to the following tips and possible solutions. If the massager is still in the fault state or can't use, please switch off the well pull out the power plug, and the company take heart f complex maintenance.

* Please remove or repair massager, the user's own disassembly or repair damage caused by will cause product warranty, the company also has no responsibility for any consequences caused by this situation.

Common fault phenomenon	Possible reasons	Method
The machine doesn't work at all	Whether the power failure; Power plug is properly inserted into the power outlet check whether the power switch is open. Check whether the speed control knob to open on the manual device.	After the call to use Insert the plug into the socket properly and firmly On off key Turn the speed control knob clockwise
Only with slow and weak	Net voltage is too low, the body is too heavy by pressing knead head	Use the voltage stabilizer, adjust the pressure
noise	New machine run-in period	After, use 20 hours, natural to reducenoise

DAILY MAINTENANCE

- (1) massage chair should keep clean and no dust, and placed in damp places.
- (2) if you don't use for a long time, please cover with a cloth
- (3) do not place the massage chairs in the sunlight or at high temperature, which leads to the massage chair leather fade and accelerated aging.
- (4) clean the massage chair, please shut of the power master switch, pull out the power plug.
- (5) do not use detergent containing organic solvents, such as benzene, clean up the massage chair, otherwise it will cause aging leather decoloring, rupture.
- (6) if the damage of soft wire of power supply must use special cord or from the manufacturer or the maintenance department to buy special components to replace.



Be careful

* please do not place the massager in direct sunlight or high temperature place.

*please with clean soft cloth to wipe clean massager.

*do not clean with a damp cloth manual device, so as not to cause trouble.

TROUBLE REMOVAL

* if encounter problems when using the massager, please refer to the following tips and possible solutions. If the massager is still in the fault state or can't use, please switch off the well pull out the power plug, and the company take heart f complex maintenance.

* Please remove or repair massager, the user's own disassembly or repair damage caused by will cause product warranty, the company also has no responsibility for any consequences caused by this situation.


TECHNICAL PARAMETERS

Product Name	Luxury Massage Chair
Rated voltage	110V~60Hz <input type="checkbox"/> 220V~50Hz <input type="checkbox"/>
Rated working time	15min
Rated power	90W
Security category	Class I
Execution standard	GB4706.1-2005GB4706.10-2008

BODY FLEX®

MAS 7

МАСАЖНО КРЕСЛО

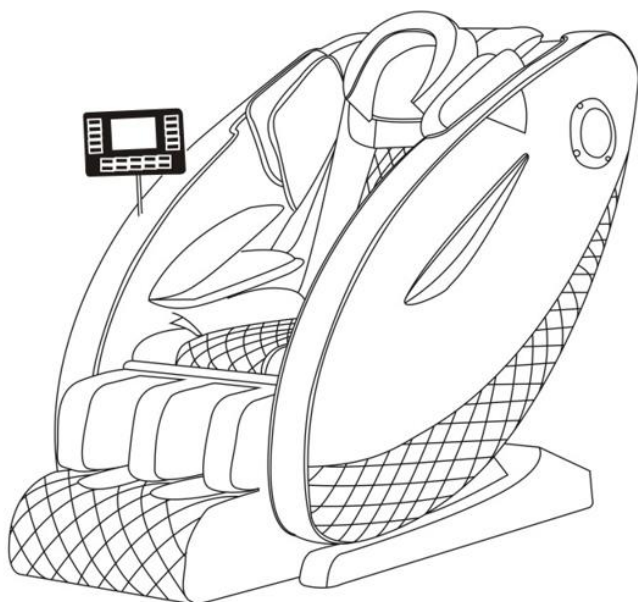

art. BF-MASCH7

Този масажен стол е ергономично проектиран за масаж на гърба, кръста, задните части, краката, ръцете и други части. Той е луксозен висок клас масажен стол с различни методи на масаж, като топло усещане и горещ компрес, вибрация и екструзия с въздушни възглавници.

Преди употреба, моля, прочетете внимателно това ръководство и обърнете специално внимание на съобщенията за безопасност, за да осигурите правилна работа и дълготрайност на продукта.

Предпазни мерки за безопасност

- (1) Преди употреба, проверете дали адаптерът отговаря на зададените параметри и дали изходната полярност съвпада.
- (2) Когато изтегляте захранващия кабел, дръжте щепсела, а не самия кабел.
- (3) Не повдигайте захранващия кабел, така че машината да се окачи или разклати, което може лесно да доведе до повреда на кабела и нарушаване на нормалната му работа.
- (4) Не допускайте тежки предмети да натискат захранващия кабел или ръчното управление.
- (5) Не хвърляйте машината или я хвърляйте на земята или във вода.
- (6) Не използвайте машината в влажна среда.
- (7) Не работете с ръчното управление с мокри ръце.
- (8) Не дърпайте кабела на ръчното управление.

2. В СЛЕДНИТЕ СЛУЧАИ, МОЛЯ НЕЗАБАВНО СПРЕТЕ УПОТРЕБАТА И ИЗТЕГЛЕТЕ ЩЕПСЕЛА ОТ РОЗЕТКАТА

- (1) Захранващият кабел е счупен или повреден.
- (2) Случайно напръскване на вода върху продукта или ръчното управление.
- (3) Съответните аксесоари са повредени или вътрешните части са открити.
- (4) Усещане за нещо необичайно по време на масажа (като силна болка, дим, миризма и т.н.).
- (5) При внезапно прекъсване на захранването, при гръмотевична буря, при шофиране с висока скорост.

ОБЪРНЕТЕ ВНИМАНИЕ НА

- (1) По време на масажа, месете главата близо до двете страни на врата, иначе може да причини болка.
- (2) Не използвайте уреда по време на сън или в рамките на 30 минути след хранене.
- (3) Не използвайте този продукт, когато сте пияни или не се чувствате добре.
- (4) Не масажирайте директно главата, месете и месете ролката и не я поставяйте на лакътя, коляното, гърдите или корема.
- (5) Непрекъснатото време за употреба не трябва да надвишава 30 минути. След употреба оставете машината да почине за 10-20 минути, за да удължите живота на уреда.

ВЪПРОСИ ЗА БЕЗОПАСНОСТ

1. Не вкарвайте никакви предмети или запалими материали в масажера. Това може да предизвика електрически шок, повреда или пожар.
2. Ако почувствате дискомфорт по време на масажа, спрете операцията незабавно.
3. По време на употреба не покривайте масажера, за да не предизвикате прекомерно нагряване и повреда или пожар.
4. Този продукт не е предназначен за самодиагностика или лечение. Ако е необходимо, потърсете медицинска помощ.
5. Ако приемате лекарства или имате здравословно състояние, консултирайте се с лекар преди употреба. Ако се чувствате зле или сте бременна, не го използвайте.
6. Използване на този продукт.
7. Ако сте бременна или по време на менструалния си период, консултирайте се първо с лекар и следвайте съветите му.
8. Препоръчителното време за употреба е 15-30 минути.
9. Преди повторна употреба, уверете се, че масажерът е изключен за повече от 30 минути.



ВНИМАНИЕ

Бъдете внимателни

1. Моля, избягвайте използването на масажера след консумация на алкохол или когато не се чувствате добре.
2. Не масажирайте директно главата, лактите, коленете, гърдите, корема и т.н.
3. В случай на разливане или изпускане на течност върху масажера, незабавно извадете щепсела от розетката. Не използвайте ръцете си, когато са мокри.
4. Инсталиране или изваждане на щепсела:
5. Не повреждайте хранващия кабел. Работата с масажера при повредени кабели може да доведе до случайни електрически шокове или механични повреди.

Не е подходящо да използвате масажера, ако:

- Ако се случи някое от следните условия, незабавно изключете превключвателя, прекъснете хранването и се свържете с нашата компания:
- Безразборната употреба на вода или вино върху масажера може да предизвика електрически шок.
- Тъканната обвивка на масажера е повредена и вътрешният механизъм е открит.
- Ако по време на масажа се появи необичайна или силна болка, незабавно спрете масажа и


потърсете медицинска помощ.

- Ако се открие някаква неизправност или необичайно състояние по време на употреба, незабавно спрете да го използвате.
- В случай на прекъсване на тока по време на употреба, трябва да се вземат мерки, за да се избегнат наранявания на потребителите при внезапно възстановяване на захранването.
- Когато се появят светкавици.

Не оставяйте масажния стол или неговите части в контакт с лица под 18 години или на, които нямат контрол върху собственото си поведение (например, психично болни, умствено изостанали и т.н.).


Стъпки за инсталиране на държача за дистанционното управление:

1. Вкарайте винтовия прът в съответния отвор.
2. Завъртете винта по посока на часовниковата стрелка до края.
3. Просто закачете дистанционното управление.

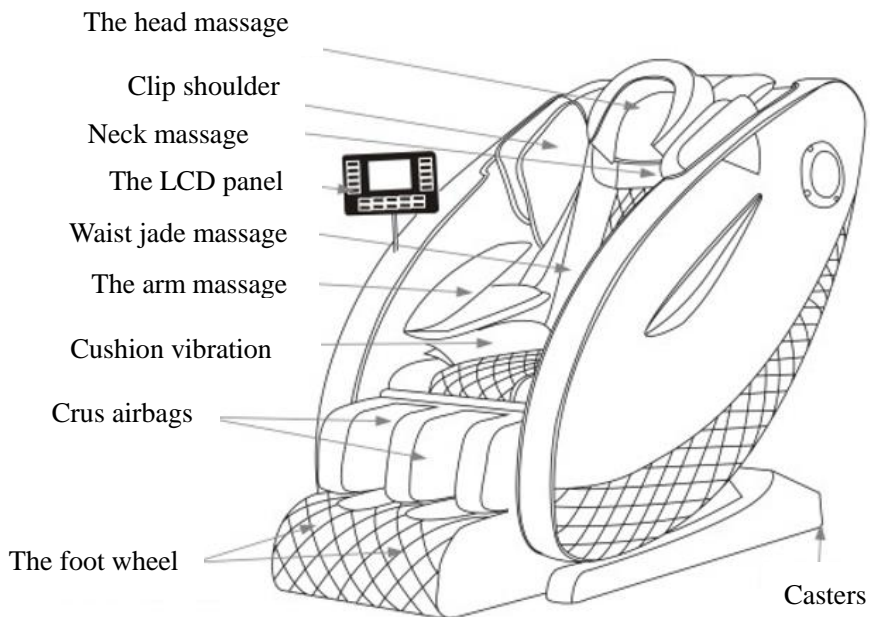

Метод на преместване

- При преместване, поддържайте долната част на възглавницата и повдигнете предната част. Внимание!
- Не премествайте хора.
- Не премествайте със малки колелца върху подове, които могат да се повредят.

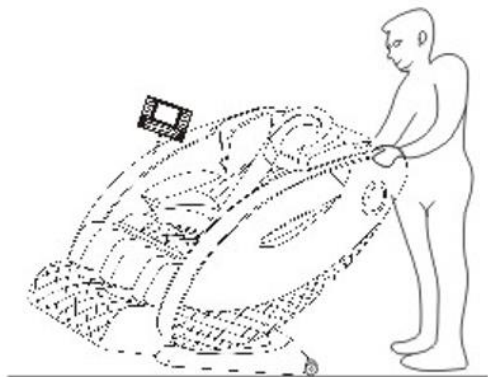

Разположение на масажния стол

Моля, оставете достатъчно пространство около масажния стол при подготовката за масаж.

1. Мястото, където се поставя масажният стол, трябва да има достатъчно място за наклоняване на стола и повдигане на стойката за крака.
2. Уверете се, че има поне 80 см пространство зад масажния стол и поне 50 см пред него.
3. Уверете се, че няма препятствия пред и зад

масажния стол.

4. За да предотвратите повреда на пода, поставете килим под масажния стол, за да не повредите пода.

УПРАВЛЕНИЕ НА ГЛАВНИЯ ДИСПЛЕЙ



МАСАЖНИ ПРОЦЕДУРИ

Захранващ ключ

- Отваряне или затваряне на масажния стол.
- При отваряне, масажният стол автоматично се накланя под ъгъл и преминава в автоматичен режим.
- При затваряне, масажният стол автоматично се връща в изходно положение. След завършване на връщането, екранът се изключва.

Програма за ръчен масаж

Има общо пет режима, които могат да се изберат, всеки с различни масажни техники.

1. Режим на месене:

- Увеличава силата на масажа.
- Комбинира месене с масаж чрез въздушно налягане.

2. Режим на масаж (успокояващ):

- Основно осигурява успокояващ масаж.
- Комбинира месене с масаж чрез въздушно налягане.

3. Режим на масаж (успокояващ):

- Основно осигурява успокояващ масаж.

- Комбинира месене, въздушно налягане и други масажни процедури.

4. Силен режим:

- Фокусира се върху масаж на кръста и бедрата.
- Комбинира месене, въздушно налягане и други масажни процедури.

5. Развлекателен режим:

- Релаксира мускулите на врата и раменете.
- Комбинира месене, въздушно налягане и други масажни процедури.

Режим на сън

- **Режим на лека интензивност:** Комфортен ъгъл за масаж, ограничено състояние на сън.

Автоматичен режим

- **Автоматично:** Натиснете този бутон за включване или изключване на функцията за масаж чрез въздушни възглавници на цялото тяло.

Натиск на рамо

- **Въздушна възглавница за рамо:** Натиснете този бутон за включване или изключване на функцията на въздушната възглавница за рамо.

Въздушно налягане на възглавницата за глава

- **Въздушна възглавница за глава:** Натиснете този бутон за включване или изключване на функцията на въздушната възглавница за глава.

Въздушно налягане на краката

- **Въздушна възглавница за крака:** Натиснете този бутон за включване или изключване на функцията на въздушната възглавница за крака.

Регулиране на въздушното налягане

- Натиснете този бутон за регулиране на силата на натиск на масажния стол. Могат да се регулират три нива.

Нулева гравитация

- **Нулева гравитация:** Натиснете този бутон, за да наклоните или върнете в изходно положение масажния стол.

Увеличаване на скоростта

- **Speed +:** Натиснете този бутон, за да увеличите силата на ролките върху стъпалата и седалището, с три нива на сила.

Намаляване на скоростта

- **Speed -:** Натиснете този бутон, за да намалите силата на ролките върху стъпалата и седалището, с три нива на сила.

Ролка за стъпала

- **Ролка за стъпала:** Натиснете този бутон, за да включите или изключите функцията за масаж на стъпалата с ролки.

Скорост на стъпалата

- **Скорост на стъпалата:** Три нива на регулиране на скоростта - 1-во ниво, 2-ро ниво, 3-то ниво, в този ред.

Отопление

- **Отопление:** Натиснете този бутон за включване или изключване на отоплението на кръста.

Таймер

- **Таймер:** По подразбиране времето е 15 минути след стартиране на машината. Използвайте този бутон за промяна на продължителността. Времето се променя в ред 15, 20, 25, 30 минути.

Повдигане на облегалката

- **Повдигане на облегалката:** Задръжте бутона, за да повдигнете облегалката, освободете бутона, за да спрете регулирането на позата.


Спускане на облегалката

- **Спускане на облегалката:** Задръжте бутона, за да спуснете облегалката, освободете бутона, за да спрете регулирането на позата.

Bluetooth програма

- Отворете масажния стол, след което активирайте Bluetooth функцията на мобилния телефон, за да търсите (луксозен масажен стол) или (универсален), и изчакайте успешното сдвояване с мобилния телефон.

УПРАВЛЕНИЕ

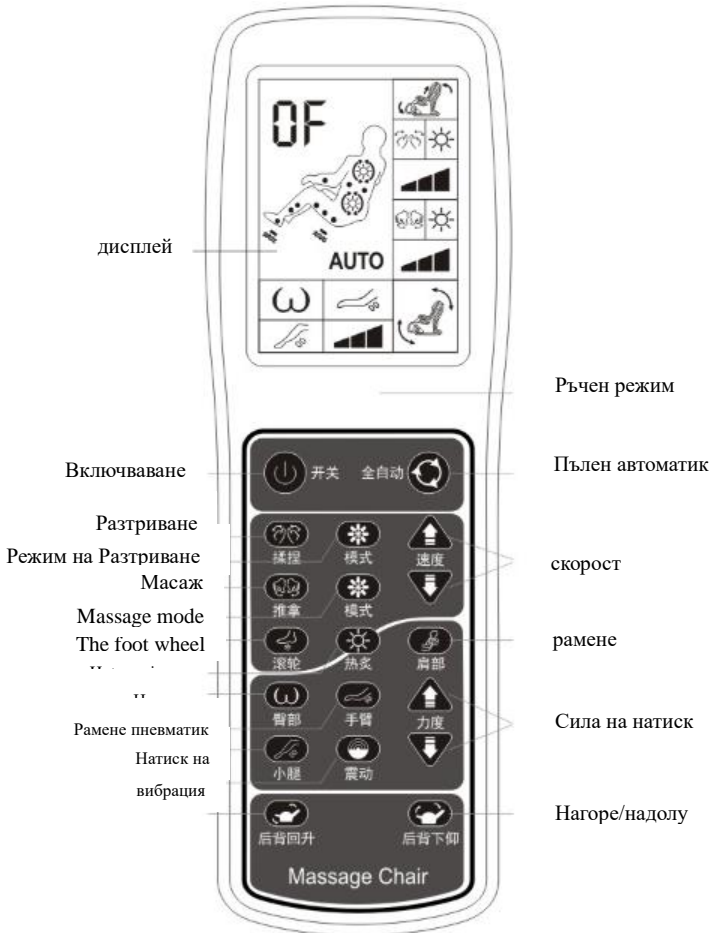

Отстраняване на проблеми

Ако срещнете проблеми при използването на масажора, моля, вижте следните съвети и възможни решения. Ако масажорът все още е в неизправно състояние или не може да се използва, моля, изключете го и извадете захранващия щепсел. Свържете се с фирмата за по-комплексна поддръжка. Моля, не разглобявайте или ремонтирайте масажора сами. Повреди, причинени от самостоятелно разглобяване или ремонт, ще доведат до анулиране на гаранцията на продукта и фирмата не носи отговорност за последствията от такава ситуация.

Грешка	Възможна причина	Метод на отстраняване
Машината изобщо не работи	Дали е прекъснато захранването; Проверете дали щепселът е правилно включен в електрическия контакт и дали превключвателят е включен. Проверете дали копчето за регулиране на скоростта е включено на ръчния уред.	След сигнала, поставете щепсела правилно и здраво в контакта. Ключ за включване и изключване. Завъртете копчето за регулиране на скоростта по посока на часовниковата стрелка.
Работи прекалено бавно или слабо	Мрежовото напрежение е твърде ниско, упражнявате твърде голям натиск с глава или тяло	Използвайте стабилизатор на напрежение, регулирайте натиска.

	Bottom of Form	
Силен шум	Период на разработване на нова машина	След 20 часа употреба, шумът естествено ще намалее.

ЕЖЕДНЕВНА ПОДДРЪЖКА

1. Масажният стол трябва да се поддържа чист и без прах, и да не се поставя на влажни места.
2. Ако не го използвате дълго време, покрийте го с кърпа.
3. Не поставяйте масажните столове на слънце или на висока температура, тъй като това води до избледняване и ускорено стареене на кожата на масажния стол.
4. При почистване на масажния стол, изключете главния превключвател за захранване и извадете захранващия щепсел.
5. Не използвайте препарати, съдържащи органични разтворители, като бензен, за почистване на масажния стол, защото това ще доведе до избледняване, скъсване и стареене на кожата.
6. Ако меките кабели на захранването са повредени, трябва да се използват специални кабели или да се закупят

специални компоненти от
производителя или от отдела за
поддръжка за подмяна.



Внимание

- Моля, не поставяйте масажора на пряка слънчева светлина или на място с висока температура.
- Моля, използвайте чиста мека кърпа, за да избършете масажора.
- Не почиствайте ръчния уред с влажна кърпа, за да не предизвикате проблеми.

ОТСТРАНЯВАНЕ НА ПРОБЛЕМИ

- Ако срещнете проблеми при използването на масажора, моля, обърнете се към следните съвети и възможни решения. Ако масажорът все още е в неизправност или не може да се използва, моля, изключете го и извадете захранващия щепсел, и се свържете с компанията за комплексна поддръжка.
- Моля, не разглобявайте и не ремонтирайте масажора сами. Повредите, причинени от потребителя

при самостоятелно разглобяване или ремонт, ще доведат до анулиране на гаранцията на продукта. Компанията също така не носи отговорност за всякакви последствия, произтичащи от тази ситуация.

Параметри

Product Name	Масажен стол
Rated voltage	110V~60Hz <input type="checkbox"/> 220V~50Hz <input type="checkbox"/>
Rated working time	15min
Мощност	90W
Security category	Class I
Execution standard	GB4706.1-2005GB4706.10-2008

Изхвърляне:

Моля, запазете опаковката за случаи на ремонт /гаранционен ремонт .

Уредът не трябва да се изхвърля заедно с домашния боклук.

Уважаеми клиенти, Вие сте длъжни да предадете за рециклиране съответните материали от

уред:

- Външна опаковка (картон)
- Отляти части от полистрол
- Опаковки и торбички от полиетилен
- Електрооборудване
- Каиши от полипропилен
- Уредът не трябва да се изхвърля заедно с домашния боклук

За връзка с фирми за рециклиране на отпадъците се обърнете към вносителя!

ВНОСИТЕЛ ЗА БЪЛГАРИЯ:

СПОРТЕН СКЛАД БГ (Соларшоп ЕООД)

гр. Пазарджик, ул. Димчо Дебелянов 27

E-mail: info@sportensklad.bg

www.sportensklad.bg